

- D Montageanweisung
- F Instructions d'installation
- I Istruzioni di montaggio
- NL Installatievoorschrift
- DK Installationsinstruktus
- N Installationsinstruktioner
- FIN Asennusohje
- S Installation instruktioner
- E Instrucciones de montaje

### INSTALLATION INSTRUCTIONS

**00A**

M20

230 Vac / 5(3) A

**00B**

- ML6420A3007
- ML6420A3015
- ML6420A3023
- ML6420A3031
- ML6420A3072
- ML6425A3006
- ML6425A3014
- ML6425B3005
- ML6425B3021

24 Vac  
230 Vac

**1**

4...5 mm

**2**

**3**

8 mm

approx. 90 mm

4 mm

3 mm

**4**

1 x max.

**Honeywell**

Manufactured for and on behalf of the Environmental & Energy Solutions Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

**Automation and Control Solutions**

Honeywell GmbH  
Böblinger Strasse 17  
71101 Schönaich, Germany  
Phone +49 (0) 7031 637 01  
Fax +49 (0) 7031 637 740  
<http://ecc.emea.honeywell.com>

 **AutomatikCentret**

Strandvejen 42 • Saksild • 8300 Odder  
86 62 63 64 • [www.automatikcentret.dk](http://www.automatikcentret.dk)  
[info@automatikcentret.dk](mailto:info@automatikcentret.dk)

MU1B-0348GE51 R1215B

Subject to change without notice