



## OJ-Air AHC-3000-X Software 1.04

Software 1.04 is now released for up-grade by the free PC tool. In the production at OJ Electronics version 1.03 is still used until further notice.

### Changes

Compared to version 1.03 there were following improvements:

#### Functionality

- No changes

#### HMI-35T

- No changes

#### BMS Modbus

- Alarm numbers in range 16xx to 25xx corrected.

#### Alarms

Alarm 1402: "Electric heating coil 1: overheating alarm" changed from auto reset to manual reset. Alarm delay reduced to 3 seconds.

Alarm 0704: "Outdoor air filter – pressure switch - active"

Alarm 0712: "Extract air filter – pressure switch - active"

Status is now also updated when the AHU is in Stop or Service stop.

Alarm 0706: "Pressure drop across supply air filter too high, filter blocked"

Alarm 0710: "Pressure drop across extract air filter too high, filter blocked"

Status is now also updated when the AHU is in Stop or Service Stop if alarm "Pressure (static)" is selected.

#### Software versions

- AHC-3000-X software 1.04
- AHC-3000-HMI-35T software 1.02

#### Affected articles

AHC-3000-T

AHC-3000-B

AHC-3000-S

AHC-3000-HMI-35T

## Coming into force

Version 1.04 is released in week 35 2019

## Features to be released in the Autumn 2019

- BasicBMS and Satellites
- VOC/CO<sub>2</sub> control loop without flow measurement
- Humidity control loop without flow measurement
- AHC-3000-S together with OJ-Air2-HMI-20T
- AHC-3000-S VOC/CO<sub>2</sub> and humidity control loops

## Software Upgrade

The software files are available at OJ Electronics [Customer log-in](#), and can be upgraded using PC-Tool vers. 1.0 or higher.

- AHC3000\_MCUSW\_104\_00\_0000.zip



**OBS:** In order to make a safe software update please follow this procedure:

1. Remove power plug from AHC-3000
2. Connect USB to RS485 cable to AHC-3000 HMI port
3. Power up AHC-3000
4. Update the AHC-3000 controller by the PC tool
5. Remove power plug from AHC-3000
6. Remove USB to RS485 cable from AHC-3000 HMI port
7. Power up AHC-3000
8. Wait until red flashing LED at the power plug starts flashing green
9. Hot plug the HMI to the AHC-3000 HMI port
10. Wait until the HMI stops flashing White/black
11. The HMI is now updated and the new version can be read out in the SW menu.

## Contact

If further technical information is required please contact our support dept.: [support@oj.dk](mailto:support@oj.dk).



Strandvejen 42 ♦ Saksild ♦ 8300 Odder  
86 62 63 64 ♦ [www.automatikcentret.dk](http://www.automatikcentret.dk)  
[info@automatikcentret.dk](mailto:info@automatikcentret.dk)

