

## Wi-Fi evohome Controller (ATC928G3000)



Wi-Fi evohome Controller  
(ATC928G3000)



Wireless Relay Box  
(BDR91) ~~Boiler~~



electric heating

To bind a **Wireless Relay Box (BDR91)** to a **Wi-Fi evohome Controller (ATC928G3000)** to control a ~~boiler~~... electric heating

### On the **evohome Controller**

- 1 Press and hold  **SETTINGS** for 5 seconds
- 2 Press the green tick 
- 3 Press **SYSTEM DEVICES**
- 4 Press **BOILER CONTROL**
- 5 Press **WIRELESS RELAY BOX**

### On the **Wireless Relay Box**

- 6 Press and hold the button for 15 seconds (until the red LED blinks rapidly) to clear any previous binding data
- 7 Press and hold the button again for 5 seconds (until the red LED blinks slowly)

### On the **evohome Controller**

- 8 Press the bind button 

You should receive a SUCCESS message on the evohome Controller and the LED on the Wireless Relay Box should stop blinking and turn OFF. If not, go back and re-bind.