resideo Pressure Reducing Valves



Braukmann D05FS

Strandvejen 42 • Saksild • 8300 Odder 86 62 63 64 • <u>www.automatikcentret.dk</u> <u>info@automatikcentret.dk</u>

Pressure reducing valve with balanced seat Standard pattern with setting scale

APPLICATION

According EN 806-2 pressure reducing valves of this type protect household water installations against excessive pressure from the supply. They can also be used for industrial or commercial applications within the range of their specification.

By installing a pressure reducing valve, pressurisation damage is avoided and water consumption is reduced.

The set pressure is also maintained constant, even when there is wide inlet pressure fluctuation.

Reduction of the operating pressure and maintaining it at a constant level minimizes flow noise in the installation.

APPROVALS

• DVGW

SPECIAL FEATURES

- Inlet pressure balancing no influence on outlet pressure by fluctuating inlet pressure
- The valve insert is of high-quality synthetic material and can be fully exchanged
- The outlet pressure is set by turning the adjustment knob
- The set pressure is directly indicated on the set point scale
- The adjustment spring is not in contact with the drinking water
- With internal and external threads $^{1}\!/_{2}$ 1", with external threads 1 $^{1}\!/_{4}$ 2"
- Also available without fittings
- All materials are UBA conform
- ACS certified



TECHNICAL DATA

Media	
Medium:	Drinking water
Connections/Sizes	
Connection sizes:	1/2" - 2"
Nominal sizes:	DN15 - DN50
Pressure values	
Max. inlet pressure:	25 bar
Outlet pressure:	1.5 - 6 bar
Preset outlet pressure:	3 bar
Min. pressure drop:	1 bar
Operating temperatures	
Max. operating temperature	30 °C
medium accord. to EN 1567:	
Max. operating temperature medium (10 bar):	70 °C

CONSTRUCTION

Overview



METHOD OF OPERATION

Spring loaded pressure reducing valves operate by means of a force equalising system. The force of a diaphragm operates against the force of an adjustment spring. If the outlet pressure and therefore diaphragm force fall because water is drawn, the then greater force of the spring causes the valve to open. The outlet pressure then increases until the forces between the diaphragm and the spring are equal again.

The inlet pressure has no influence in either opening or closing of the valve. Because of this, inlet pressure fluctuation does not influence the outlet pressure, thus providing inlet pressure balancing.

TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	5 °C
Max. ambient temperature:	55 °C
Min. ambient relative humidity:	25 % *
Max. ambient relative humidity:	85 % *

*non condensing

	Components	Materials
1	Spring bonnet with adjustment knob and setting scale	High-quality synthetic material
2	Housing with pressure gauge connection	Dezincification-resistant brass
3	Threaded male connections (option A)	Brass
4	Pressure gauge connection	
	Not depicted components:	
	Adjustment spring	Spring steel
	Valve insert complete with diaphragm and valve seat	High-quality synthetic material, EPDM diaphragm
	Pressure gauge not included (see accessories)	High-quality synthetic material
	Seals	EPDM

INSTALLATION GUIDELINES

Setup requirements

- Horizontal and vertical installation position possible
 - In vertical installation position spring bonnet with adjustment knob facing upwards
- Install shut-off valves
- The installation location should be protected against frost and be easily accessible
 - Pressure gauge can be read off easily
 - Simplified maintenance and cleaning
- To guarantee perfect functioning, a filter must be inserted ahead of the pressure reducing valve
- Provide a straight section of pipework of at least five times the nominal valve size after the pressure reducing valve (in accordance with EN 806-2)
- Requires regular maintenance in accordance with EN 806-5

Installation Example

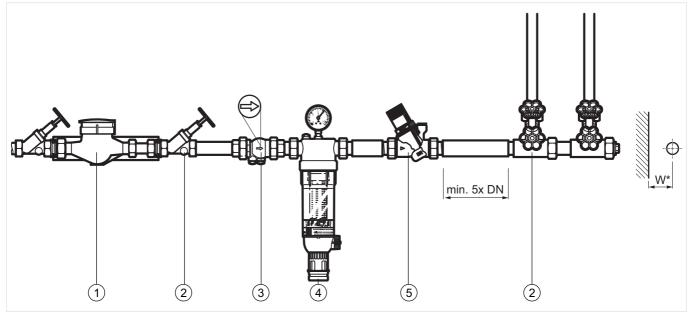


Fig. 1 Standard installation example for the pressure reducing valve

- 1 Water meter
- 2 Shut-off valve
- 3 Check valve
- 4 Filtering unit
- 5 Pressure reducing valve

Connection sizes:	¹ /2"	³ /4"	1"	1 ¹ /4"	1 ¹ / ₂ "	2"
Distance in mm (W*):	55	55	60	60	70	70

* Required installation distances between the centerline of the pipework and the surrounding in dependency of the connection size.

TECHNICAL CHARACTERISTICS

kvs-Values

Connection sizes:	¹ /2"	³ /4"	1"	1¹/ 4"	1¹/ 2"	2"
k _{vs} -value (m ³ /h):	3.0	3.5	3.7	7.3	7.5	7.7
IfBt designation:	P-IX 9290/II	P-IX 9290/II	P-IX 9290/II	P-IX 9290/II	- *	- *
DIN/DVGW Registration No.:	NW-6330 BN 0584					

* Compulsory testing in sizes R $^{1}\!/_{2}$ " to R 1 $^{1}\!/_{4}$

Pressure drop characteristics


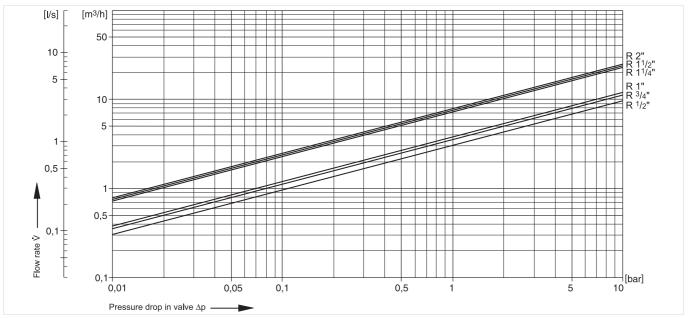


Fig. 2 Pressure drop within the valve in dependency of the flow rate and the used connection size

DIMENSIONS

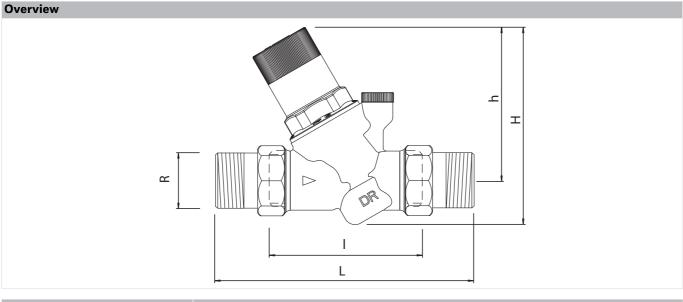

Parameter	Values						
Connection sizes:	R	1/2"	3/4"	1"	1 ¹ /4"	1 ¹ / ₂ "	2"
Nominal size diameter:	DN	15	20	25	32	40	50
Weight:	kg	0.65	0.82	1.35	2.20	3.09	4.46
Dimensions:	L	155	163	176	207	216	257
	1	95	95	97	115	120.5	140
	Н	123	123	124	178	181	178
	h	96	96	96	147	147	147

Note: All dimensions in mm unless stated otherwise.

ORDERING INFORMATION

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

Options

The valve is available in the following sizes: 1/2", 3/4", 1", 11/4", 11/2" and 2".

- standard
- not available

		D05FSA	D05FSE
Connection type: external threaded connection s	external threaded connection set on in- and outlet	•	-
	external thread on in- and outlet	-	•

Note: ... = space holder for connection size


Note: Ordering number example for $1^{1/4}$ and type A valve: D05FS-11/4A

Accessories

	Descriptio	n	Dimension	Part No.		
	M38K	Pressure gauge				
		Housing diameter 50 mm, below connection th	read G ¹ /4"			
		Note: Please indicate upper value of pressure range whe	n ordering.			
		Range: 0 - 4 bar		M38K-A4		
er o nite		Range: 0 - 10 bar		M38K-A10		
		Range: 0 - 16 bar		M38K-A16		
		Range: 0 - 25 bar		M38K-A25		
	DS05	Insulation shells				
		Please indicate nominal size $(1/2)$ to 2") when or	dering e.g. DS05	5-1/2		
				DS05		
	ZR06K	Double ring wrench				
		For removal of spring bonnet and filter bowl				
				ZR06K		
	VST06A	Connection set				
		Threaded connections				
			1/2"	VST06-1/2A		
			3/4"	VST06-3/4A		
			1"	VST06-1A		
			11/4"	VST06-11/4A		
			$1^{1}/_{2}$ "	VST06-11/2A		
			2"	VST06-2A		
	VST06B	Connection set				
6		Solder connections				
			¹ / ₂ "	VST06-1/2B		
			3/4"	VST06-3/4B		
			1"	VST06-1B		
-			1 ¹ /4"	VST06-11/4B		
			$1^{1}/_{2}$ "	VST06-11/2B		
			2"	VST06-2B		

Spare Parts

Pressure Reducing Valve D05FS, from 2007 onwards

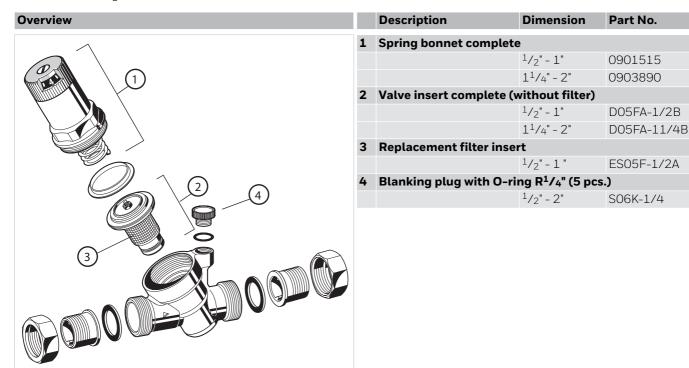



Manufactured for and on behalf of Pittway Sàrl, Z.A., La Pièce 4, 1180 Rolle, Switzerland by its authorised representative Ademco 1 GmbH

© 2020 Resideo Technologies, Inc. All rights reserved.

homecomfort.resideo.com/europe Ademco 1 GmbH, Hardhofweg 40, 74821 MOSBACH, GERMANY e Phone: +49 6261 810 Fax: +49 6261 81309

For more information

Subject to change. EN0H-1034GE23 R0420

AutomatikCentret

Strandvejen 42 • Saksild • 8300 Odder 86 62 63 64 • <u>www.automatikcentret.dk</u> <u>info@automatikcentret.dk</u>