

## OJ-Air2 Software version 5.20

OJ-Air2 software version 5.20 is released for up-grade with the SD-card. In the production at OJ Electronics version 5.09 is still used, until further notice.

### Changes

Compared to version 5.09 there were following improvements:

### Functional description

No changes.

The functional description OJ-Air2 01 available at OJ Electronics customer log-in is still valid.

### Functionality

Reduced airflow at low supply air temperature

- Reduced airflow is now also possible if Fan control loop is set to "Constant motor speed". (UOE 8326).

Web

- 0\_5\_2: Swedish text corrected: Alarm 184 "Dynamic de-icing not measured" (UOE 8446).

Cloud

- "Fan reg." mode is now displayed correctly showing Slave mode for Supply and Extract fans individually. (UOE 8481).

OJ-Air2-HMI-35T

- Swedish text corrected: Alarm 184 "Dynamic de-icing not measured". (UOE 8446).

Hand terminal

- No changes.

#### Alarms

- All 3 seconds alarm delays increased to 10 seconds in order to avoid rare false alarm from e.g. an External fire thermostat connected to Ext\_3. (UOE 8561).

#### Modbus registers

- No changes

#### BACnet

- No changes

### Affected articles

OJ-Air2Master

### Coming into force

Version 5.20 is released for up-grade with SD-Card in week 28 2020.

### Compatibility

No changes are required when upgrading from version 5.09 to 5.20.

### Updating with the SD card

The OJ-Air2Master has to be with **software version 3.01** or higher. The following files must be copied to the SD card:

- "air2\_v207\_update\_rd.gz"
- "version.crc" (1kB, 10-06-2020, 10:55)
- "air2\_v520\_update\_jffs2.tar.gz"

**OBS:** This update requires three files on the SD-card, since the memory allocation has to be re-arranged in the OJ-Air2Master to software 5.xx layout. Due to the large amount of data, this update has a duration of approximately 8 minutes, if the current software version is lower than 5.01. See details on next page.

**WARNING: Do not power off the OJ-Air2Master during the update.**

<https://ojelectronics.com/support>



The files are available at OJ Electronics Customer Login:

<https://ojelectronics.com/support>

Up to 8Gb HC SD cards can be used from version 2.19.


The SD-card shall have a MBR with msdos partition table, and the first primary partition in it shall be VFAT (or FAT32) file system.

**Software 5.0x update sequence if current software version is lower than 5.01:**


**WARNING: Do not power off the OJ-Air2Master during the update sequence. It will damage the internal files and the OJ-Air2Master will need service at OJ Electronics factory.**

1. Copy the **three** files to a SD card (Max. SD-card size is 8Gb)
2. Insert the SD card in the OJ-Air2Master
3. Wait approximately one minute until the new software is detected
4. Press update button on HMI
5. Wait 8 minutes until the update sequence is completed  
**DON'T touch anything, just let the process run.**

The HMI will show these screens during the update

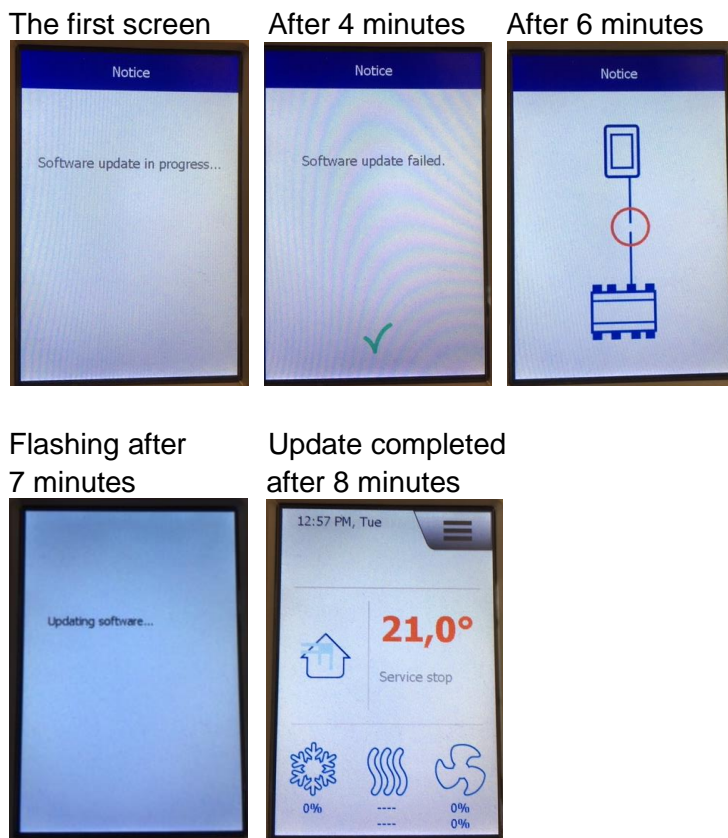

6. Verify the update was successful

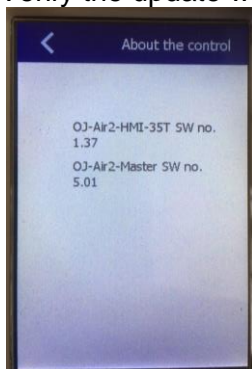

OJ-Air2-HMI-35T SW 1.37 is OK  
OJ-Air2-Master SW 5.20 is OK