Honeywell Home Boiler Room Valves



AutomatikCentret

Strandvejen 42 • Saksild • 8300 Odder 86 62 63 64 • www.automatikcentret.dk info@automatikcentret.dk

DU146

Automatic bypass and differential pressure Valve With Differential Pressure Indicator

APPLICATION

The automatic bypass and differential pressure valve controls water flow in the heating circuit according to the water pressure across it and is used to maintain a minimum flow rate through the boiler and to limit circulation pressure when other water paths are closed. A bypass circuit must be installed if the Boiler manufacturer requires one, or specifies that a minimum flow rate has to be maintained whilst the Boiler is firing. The use of automatic bypass valves becomes particularly important when heating systems include large numbers of thermostatic radiator valves (TRVs) - whilst the TRVs are open the automatic bypass valve remains closed, however, as the TRVs start to close, the automatic bypass valve starts to open maintaining the required water flow through the boiler.

Using an automatic bypass valve is also likely to reduce noise in systems caused by excess water velocities. It also helps to reduce the corrosion caused by flue gas condensation as the boiler return temperature is raised.

SPECIAL FEATURES


- Maintain minimum flow through a boiler
- Minimises flow noise
- Hinders boiler corrosion
- Differential pressure finely adjustable using the indicator scale integrated in metal housing
- Presetting accessible directly
- Setting value is in meters water column
- No external controls required



TECHNICAL DATA

Media				
Medium:	Water or water-glycol mixture, quality to VDI 2035			
pH-value:	8 - 9.5			
Connections/Sizes				
Connection sizes:	$^{3}/_{4}$ " and $1^{1}/_{4}$ "			
Operating temperatures				
Max. operating temperature medium:	110 °C (230 °F)			
Pressure values				
Max. operating pressure:	3.0 bar (43.5 psi)			
Differential pressure presetting range:	0.05 - 0.5 bar (0.7 - 7.3 psi)			
Specifications				
Factory setting:	0.2 bar (2.9 psi)			

CONSTRUCTION

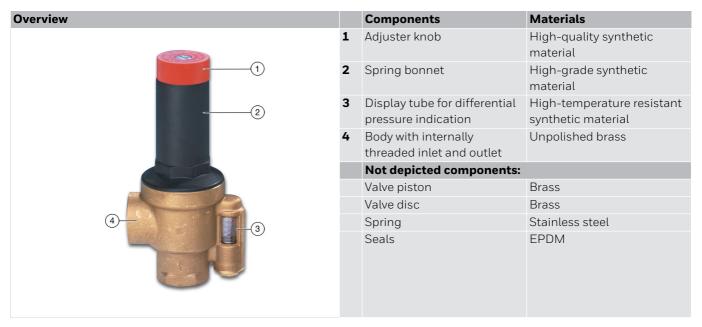

METHOD OF OPERATION

The automatic bypass and differential pressure valve is installed between the supply and return mains pipeline. The differential pressure is set according to the minimum flow required for the boiler and the available pump head. When the differential pressure is reached, for example because of closing TRVs, the valve starts to open. As the differential pressure increases across the valve the valve is further opened and the flow increased. When the differential pressure decreases, for example because TRVs are opening again, the valve closes and the flow is redirected from the bypass to the heating loop.

TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	0 °C
Max. ambient temperature:	40 °C
Max. ambient relative humidity:	75 % *


^{*}non condensing

INSTALLATION GUIDELINES

Setup requirements

- Installation between flow and return
- Not suitable for district heating installations
- For maintenance purposes it is recommended that shut-off valves be fitted on both sides of the bypass valve
- DU146 can be installed:
 - On heating systems with three-way mixing valves
 - On heating systems with four-way mixing valves
 - On gas-fired hot water circulation heating systems


Installation Example

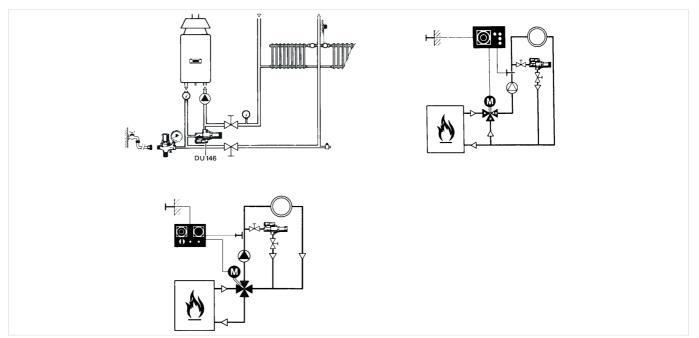


 $Fig.\ 1\ DU146\ in\ heating\ loops\ with\ boiler, in\ heating\ systems\ with\ three-way\ mixing\ valve\ and\ in\ heating\ systems\ with\ four-way\ mixing\ valve.$

TECHNICAL CHARACTERISTICS

Flow chart

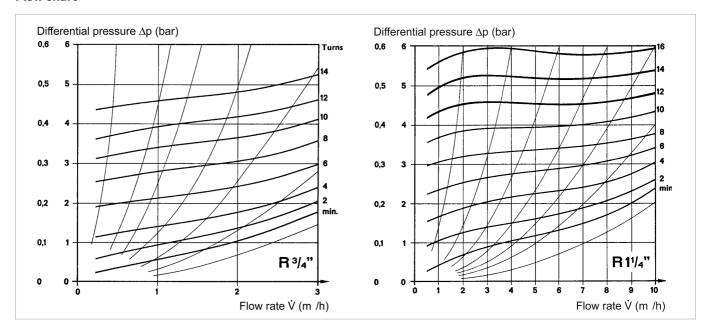

DIMENSIONS

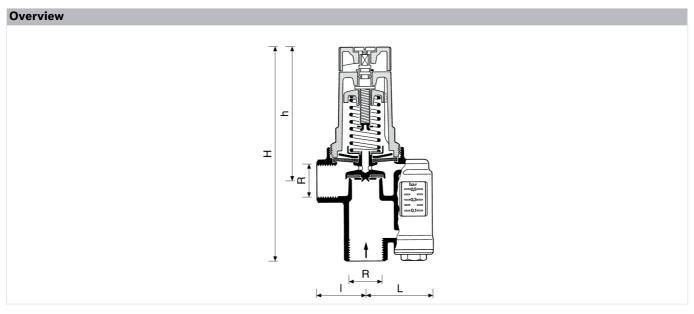

Parameter		Values		
Connection sizes:	DN	3/4"	1 ¹ / ₄ "	
Dimensions:	L	50	58	
	Н	160	213	
	h	100	155	
	1	36	51	
for installations 90/70 up to:	ca. KW	70	232	
	approx. kcal/h	60.000	200.000	
OS-No.:		DU146-3/4A	DU146-11/4A	

Note: All dimensions in mm unless stated otherwise.

ORDERING INFORMATION

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

Options

The valve is available in the following sizes: $^{3}/_{4}$ " and $1^{1}/_{4}$ "

- standard
- not available

		DU146- ³ /4A	DU146-1 ¹ / ₄ A
Connection sizes:	with internal threads Rp ³ / ₄ "	•	-
	with internal threads Rp $1^1/_4$ "	-	•

Note: Special Versions available on request

Note: Ordering number example for $1^1/4$ " and type A valve: DU146-11/4A

Accessories

	Description		Dimension	Part No.	
00	DU146AH	Complete indicator tube			
	-A	For DU146 differential pressure and bypass valve.			
000		Comprising: Indicator tube, spring, indicator piston and 5 'O' rings		DU146AH-A	

Spare Parts

Boiler Room Valve DU146.

Overview		Description	Dimension	Part No.
	1	Valve insert		
			3/4"	0900311
			11/4"	0900312

For more information

homecomfort.resideo.com/europe



Ademco 1 GmbH Hardhofweg 40 74821 MOSBACH GERMANY

Phone: +49 6261 810 Fax: +49 6261 81309 Manufactured for and on behalf of the Pittway Sàrl, La Pièce 4, 1180 Rolle, Switzerland by its Authorised Representative Ademco 1 GmbH ENOH-2701GE25 R0420

Subject to change

© 2020 Pittway Sàrl. All rights reserved.
This document contains proprietary information of Pittway Sàrl and its affiliated companies and is protected by copyright and other international laws. Reproduction or improper use without specific written authorisation of Pittway Sàrl is strictly forbidden. The Honeywell Home trademark is used under license from Honeywell International Inc.

