



Thermostat

RT

For heavy-duty industrial applications

Description

RT thermostats incorporate a temperature controlled, single-pole change over switch where the contact position depends on the temperature of the sensor and the set scale value. The RT series consists of thermostats with room sensors, duct sensors and capillary tube sensors for general industrial and marine applications.

Features & benefits


- Simple design
- High accuracy
- High repeatability
- Long operation lifetime
- Available with all major marine approvals
- Safety Integrity Level: SIL 2 according to IEC 61508

Applications

RT 115 for control of ventilation plant in livestock buildings

RT 115 has two sensors, each of which is connected to the space between bellows and bellows housing; see Figure: Thermostat, type RT 115. One sensor is a normal, external, rigid coiled capillary tube type, the other is a bulb sensor located in the thermostat housing.

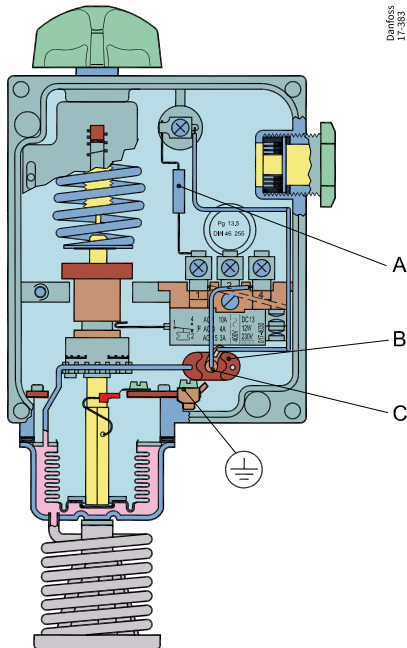Figure: Thermostat, type RT 115



A	Series resistor
B	Bulb sensor
C	Heating element

The bulb sensor is heated by an element which is cut in when the thermostat stops the fans and is cut out when the thermostat starts the fans.

The for operation is as follows:

If the room temperature is more than the value set on the thermostat, 20 °C for example, the fans run continuously (100% operating time).


If the room temperature falls to 20 °C, the switch contacts changeover, the fan stops and the bulb sensor heating element cuts in.

When the bulb sensor is heated up, pressure in the sensor system increases and after a certain time the switch changes over again thereby cutting in the fans and cutting out the element.

If the room temperature falls more than 2 °C under the set temperature - in this example, lower than 18 °C - the fans stop completely. The heating element is cut in as usual but can no longer heat the bulb sensor sufficiently to create the required pressure increase in the thermostatic element to cut in the fans again. Thus, with a room temperature of less than 18 °C the operating time is 0%.

An example is shown in Figure: Ventilator running time

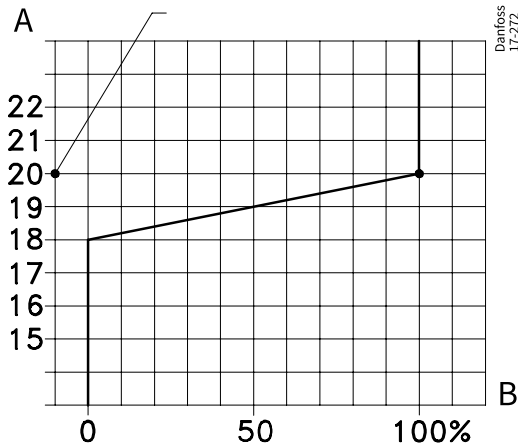Figure: Ventilator running time



A	Temperature setting [°C]
B	Ventilator running time in [%]

With temperature settings other than the one shown, the inclined line in the diagram is displaced parallel. The line break point on the right of the diagram always corresponds to the set value. It is therefore possible to maintain a stable room temperature and at the same time obtain periodic ventilation where the duration of the ventilation periods depends on the difference between the actual room temperature and the set temperature.

By ensuring that the thermostat is always set at least 2 °C over the lowest permissible room temperature, the thermostat will never allow the room temperature to fall below the desired level.

Table: Connection diagrams for RT 115

017-519766, 380 V	017-519766, 239 V	017-519866, 230 V

A	Phase input to fan
B	Control lead

RT-L thermostats are fitted with an adjustable neutral zone. This enables the units to be used for floating control. The terminology involved is explained below.

Floating control

A form of discontinuous control where the correcting element (e.g. valve, damper, or similar) moves towards one extreme position at a rate independent of the magnitude of the error when the error exceeds a definite positive and towards the opposite extreme position when the error exceeds a definite negative value.

Hunting

Periodic variations of the controlled variable from the fixed reference.

Neutral zone

The interval in the controlled variable in which the correcting element does not respond.

Mechanical differential

The interval between the values of the controlled variable in which the correcting element does respond. The contact system in neutral zone units cannot be exchanged, as the contact system adjustment is adjusted to the other parts of the unit.

Ordering

Product code numbers

When ordering, please state type and code number.

Types of charge:




A: Vapour charge – sensor must not be the warmest part

B: Adsorption charge

C: Partial charge – the sensor must not be the coldest part

Thermostats with cylindrical remote sensor

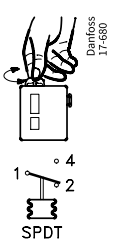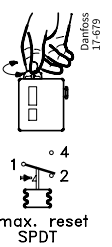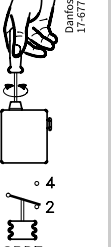Table: Thermostats with cylindrical remote sensor

Setting charge [°C]	Adjustable differential range ^[1]		At highest range setting [°C]	Type of charge	Capillary tube length [m]	Code no.			Type
	At lowest range setting [°C]	At highest range setting [°C]							
-45 -- -15	2.2 – 10	1 – 4.5	150	A	2	017-506666	–	–	RT 9
-30 – 0	1.5 – 6	1 – 3	150	A	2	017-509766	–	–	RT 13
-25 – 15	2.8 – 10	1 – 4	150	A	2	017-501466⁽²⁾	–	–	RT 3
-25 – 15	2.8 – 10	1 – 4	150	A	5	017-501666	–	–	RT 3
-25 – 15	2.8 – 10	1 – 4	150	A	8	017-501766	–	–	RT 3
-25 – 15	5 – 18	6 – 20	150	B	2	017-500866	–	–	RT 2
-25 – 15	2 – 10	2.5 – 14	150	B	2	017-505366	–	–	RT 7
-25 – 15	2 – 10	2.5 – 14	150	B	5	017-505566	–	–	RT 7
-25 – 15	2 – 10	2.5 – 14	150	B	8	017-505666	–	–	RT 7
-20 – 12	1.5 – 7	1.5 – 7	145	B	2	017-506366	–	–	RT 8
-5 – 10	1 – 3.5	1 – 3	65	B	2	017-508966	–	–	RT 12
-5 – 30	2 – 8	2 – 10	150	B	2	017-509966⁽²⁾	–	–	RT 14
-5 – 30	2 – 8	2 – 10	150	B	3	017-510066	–	–	RT 14
-5 – 30	2 – 8	2 – 10	150	B	5	017-510166	–	–	RT 14
-5 – 30	2 – 8	2 – 10	150	B	8	017-510266	–	–	RT 14
-5 – 30	2 – 8	2 – 10	150	B	10	017-510366	–	–	RT 14
-5 – 50	2 – 9	3 – 19	150	B	2	017-518066	–	–	RT 26
5 – 22	1.1 – 3	1 – 3	85	B	2	017-527866	–	–	RT 23
8 – 32	1.6 – 8	1.6 – 8	150	B	2	017-511566	–	–	RT 15
25 – 90	2.4 – 10	3.5 – 20	300	B	2	017-500366⁽²⁾	017-500466	017-500566	RT 101
25 – 90	2.4 – 10	3.5 – 20	300	B	3	017-500666	–	–	RT 101
25 – 90	2.4 – 10	3.5 – 20	300	B	5	017-502266	017-502366	–	RT 101
25 – 90	2.4 – 10	3.5 – 20	300	B	8	017-502466	–	–	RT 101

25 – 90	2.4 – 10	3.5 – 20	300	B	10	017-502566	–	–	RT 101
20 – 90	4 – 20	2 – 7	120	C	2	017-504866	–	017-504966	RT 106
20 – 90	4 – 20	2 – 7	120	C	3	–	–	017-505166	RT 106
20 – 90	4 – 20	2 – 7	120	C	5	017-505066	–	–	RT 106
30 – 140	5 – 20	4 – 14	220	B	2	017-506066	–	–	RT 108
70 – 150	6 – 25	1.8 – 8	215	C	2	017-513566⁽²⁾	017-513666	017-513766	RT 107
70 – 150	6 – 25	1.8 – 8	215	C	3	017-513966	–	–	RT 107
70 – 150	6 – 25	1.8 – 8	215	C	5	017-514066	017-514166	017-514366	RT 107
70 – 150	6 – 25	1.8 – 8	215	C	8	017-514466	–	–	RT 107
70 – 150	6 – 25	1.8 – 8	215	C	10	017-514566	–	–	RT 107
120 – 215	7 – 30	1.8 – 9	260	C	2	017-520566 ⁽³⁾	017-521166 ⁽³⁾	–	RT 120
120 – 215	7 – 30	1.8 – 9	260	C	5	017-520666 ⁽³⁾	–	–	RT 120
120 – 215	7 – 30	1.8 – 9	260	C	8	017-520766 ⁽³⁾	–	–	RT 120
120 – 215	7 – 30	1.8 – 9	260	C	2	017-520866	017-521466 ⁽⁴⁾	–	RT 120
120 – 215	7 – 30	1.8 – 9	260	C	5	017-520966	–	–	RT 120
150 – 250	6.5 – 30	1.8 – 9	300	C	2	017-522066	017-522466	–	RT 123
150 – 250	6.5 – 30	1.8 – 9	300	C	5	017-522266	–	–	RT 123
200 – 300	5 – 25	2.5 – 10	350	C	2	017-522766	017-523166	–	RT 124
200 – 300	5 – 25	2.5 – 10	350	C	5	017-522966	–	–	RT 124

⁽¹⁾ See also Nomograms for obtained differentials

⁽²⁾ Preferred charge.

⁽³⁾ Thermostats fitted with neon lamp connected to terminal 4.

⁽⁴⁾ Thermostats with tamper-proof seal cap

Thermostats with room sensor, duct sensor and capillary tube sensor

Table: Thermostats with room sensor, duct sensor and capillary tube sensor

Setting Range [°C]	Adjustable differential range ⁽¹⁾		Max. sensor temperature [°C]	Type of charge	Capillary tube length [m]	Sensor type ⁽²⁾	Code no.	Type
	At lowest range setting [°C]	At highest range setting [°C]						
-50 – -15	2.2 – 7	1.5 – 5	100	A	–	1	017-511766⁽³⁾	RT 17
-30 – 0	1.5 – 6	1 – 3	66	A	–	1	017-508366	RT 11
-25 – 15	2 – 10	2 – 12	100	B	–	1	017-511866⁽³⁾	RT 34
-5 – 30	1.5 – 7	1.2 – 4	75	A	–	1	017-503666⁽³⁾	RT 4
-5 – 30	1.5 – 7	1.2 – 4	75	A	–	1	017-503766 ⁽⁴⁾	RT 4
10 – 35	(7)	(7)	92	B	–	1	017-519766 ⁽⁵⁾	RT 115
10 – 35	(7)	(7)	92	B	–	1	017-519866 ⁽⁶⁾	RT 115
10 – 45	1.3 – 7	1 – 5	100	A	–	1	017-515566⁽³⁾	RT 103
15 – 45	1.8 – 8	2.5 – 11	240	B	2	2	017-523666	RT 140
40 – 80	1.9 – 9	2.5 – 17	250	B	2	2	017-524166	RT 141
25 – 90	2.4 – 10	3.5 – 20	300	B	2	3	017-514766	RT 102

⁽¹⁾ See also Nomograms for obtained differentials.

⁽²⁾ See drawings in Sensor types.

⁽³⁾ Preferred charge.

⁽⁴⁾ Bellows with built-in heating element which reduces the thermal differential (220 V).

⁽⁵⁾ Can be connected to 220 V and 380 V.

⁽⁶⁾ Can be connected to 220 V.

⁽⁷⁾ Special thermostat for ventilation plant.

Thermostats with adjustable neutral zone

Table: Thermostats with adjustable neutral zone





Setting range [°C]	Mechanical differential [°C]	Adjustable neutral zone ⁽¹⁾		Max. sensor temperature [°C]	Type of charge	Capillary tube length [m]	Sensor type ⁽²⁾	Code no.	Type
		At lowest range setting [°C]	At highest range setting [°C]						
-20 – 12	1.5	1.5 – 4.4	1.5 – 4.9	145	B	2	4	017L003066	RT 8L
-5 – 30	1.5	1.5 – 5	1.5 – 5	150	B	2	4	017L003466	RT 14L
0 – 38	1.5 / 0.7	1.5 – 5	0.7 – 1.9	100	A	–	1	017L002466	RT 16L
15 – 45	1.8 / 2	1.8 – 4.5	2 – 5	240	B	2	2	017L003166	RT 140L
25 – 90	2.5 / 3.5	2.5 – 7	3.5 – 12.5	300	B	2	4	017L006266	RT 101L

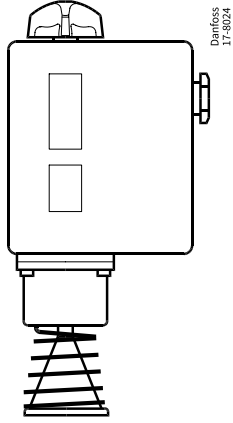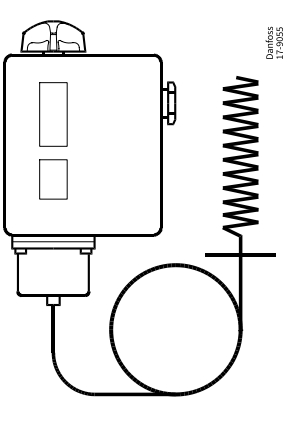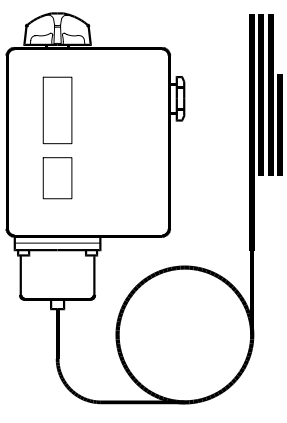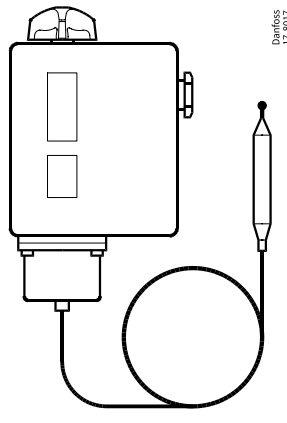⁽¹⁾ See also Nomograms for obtained differentials.

⁽²⁾ See drawings in Sensor types.

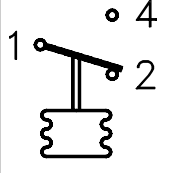
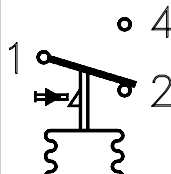
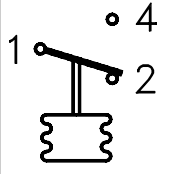
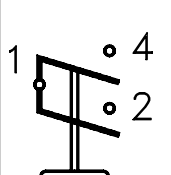
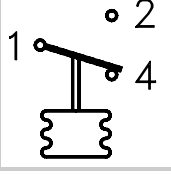
Sensor types

Table: Sensor types

1	2	3	4
Thermostat with room sensor	Thermostat with duct sensor	Thermostat with capillary tube sensor	Thermostat with cylindrical remote sensor
			

Spare parts code numbers

Table: Contact system

Version	Symbol	Description	Contact rating	Code no.
Standard		Danfoss 17-9022 Single-pole changeover switch (SPDT) with terminal board proof against leakage current Fitted in all standard versions of type RT⁽¹⁾ . Snap action changeover contacts		017-403066
With max. reset		Danfoss 17-9032 For manual reset of unit after contact change-over on rising pressure. For units with max. reset.	<i>Alternating current:</i> AC-1 (ohmic): 10 A, 400 V AC-3 (inductive): 4 A, 400 V AC-15: 3 A, 400 V Blocked rotor: 28 A, 400 V <i>Direct current:</i> DC-13: 12 W, 220 V	017-40426
Standard		Danfoss 17-9026 Single-pole changeover switch (SPDT) with gold plated (oxide-free) contact surfaces. In-crases cut-in reliability on alarm and monitoring systems, etc. Snap action changeover contacts. Terminal board proof against leakage current.	<i>Alternating current:</i> AC-1(ohmic): 10 A, 400 V AC-3 (inductive): 2 A, 400 V AC-15: 1 A, 400 V Blocked rotor: 14 A, 400 V <i>Direct current:</i> DC-13: 12 W, 220 V	
Cuts in two circuits simultaneously		Danfoss 17-9034 Single-pole changeover switch that cuts in two circuits simultaneously on rising pressure. Snap action changeover contacts. Terminal board proof against leakage current.	<i>Alternating current:</i> AC-1(ohmic): 10 A, 400 V AC-3 (inductive): 3 A, 400 V AC-15: 2 A, 400 V Blocked rotor: 21 A, 400 V <i>Direct current:</i> DC-13: 12 W, 220 V ⁽²⁾	017-403466
With non-snap action changeover contacts		Danfoss 17-9024 Single-pole changeover with non-snap action changeover gold plated (oxide-free) contacts.	Alternating or direct current: 25 VA, 24 V	017-018166

⁽¹⁾ At load types with low currents/voltages contact failure may occur on the silver contacts because of oxidation. In systems where such a contact failure is of great importance (alarm etc.), gold plated contacts are recommended.

⁽²⁾ If current is led through contacts 2 and 4, i.e. terminals 2 and 4 connected but not 1, max. permissible load is increased to 90 W, 220 V.

Note:

Contact systems for neutral zone units are not available as spare parts. Exchange not possible, as the contact system adjustment is adjusted to the other parts of the unit.

The switch contacts are shown in the position they assume on falling temperature, i.e. after downward movement of the RT main spindle. The setting pointer of the control shows the scale value at which contact changeover occurs on falling temperature.

An exception is switch no. 017-403066 with max. reset where the setting pointer shows the scale value at which contact changeover occurs on rising temperature.

Table: Contact system

Version	Symbol	Description	Contact rating	Code no.
With min. reset		For manual reset of unit after contact change-over on falling pressure. Gold plated (oxide-free) contact surfaces.	For alarm application <i>Alternating current</i> AC-1 (ohmic): 10 A, 400 V AC-3 (inductive): 2 A, 400 V Full load current: 2 A, 400 V AC-15: 1 A, 400 V Blocked rotor: 14 A, 400 V <i>Direct current</i> DC-13: 12 W, 220 V For control application Max. 100 mA / 30 V AC / DC Min. 1 mA / 5 V AC / DC	017-404766
With max. reset		For manual reset of unit after contact change-over on rising pressure. Gold plated (oxide-free) contact surfaces.		017-404866

Table: Other parts

Part		Description	Qty.	Code no.
Cover		Covers: Polyamide (with window) Colour: Pale grey RAL 7035 (without window)	5 5	017-436166 017-436266
Setting knob		Replacement: Pale grey Ral 7035	30	017-436366
Seal cap		Seal cap to replace setting knob so that setting can only be altered with tools Colour: Black	20	017-436066
Seal screws for cover and seal cap			1 + 1	017-425166
Capillary tube gland		For all RT thermostats with remote sensor. G½A (pipe thread ISO 228/1), oil resistant rubber washer for max. 110 °C / 90 bar.	5	017-422066
Capillary tube gland		For RT 106 thermostats with remote sensor. G¾A (pipe thread ISO 228/1), oil resistant rubber washer for max. 110 °C / 90 bar.	1	003N0155
Sensor clip		For all RT units with remote sensor: L = 76 mm	10	017-420366











Heat conductive compound		<p>For RT thermostats with the sensor insert in a pocket. Tube with 3.5 cm³ compound to be filled in the sensor pocket to improve heat transfer between pocket and sensor.</p> <p>Application range for compound: -20 – 150 °C, momentarily up to 220 °C.</p>	10	041E0114
Sensor holder		<p>For RT 14, RT 101 and RT 270 Sensor holder for wall mounting incl. four capillary tube clips</p>	20 set	017-420166

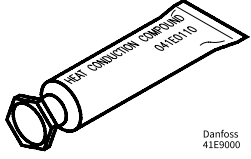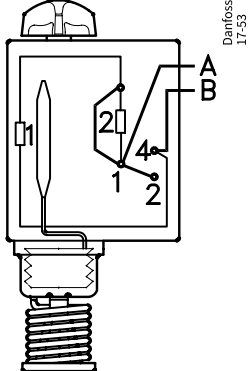Table: Sensor pocket for RT thermostats with cylindrical remote sensor

Used for the following types		Insertion length L [mm]	d [mm]	Material	Connection pipe thread ISO 228/1	Code no.
All except RT 12, RT 23, RT 106, RT 108, RT 124, RT 270		112	11	Brass	G ½A	017-437066
All except RT 12, RT 23, RT 106, RT 108, RT 124, RT 271		112	11	Stainless steel 18/8		017-436966
RT 106, RT 124 ⁽¹⁾		110	15	Brass		060L327166 ⁽²⁾
RT 106, RT 124 ⁽¹⁾		110	15	Stainless steel 18/8		060L326866 ⁽²⁾
RT 106, RT 124 ⁽¹⁾		160	15	Brass		060L326366 ⁽²⁾
RT 106, RT 124 ⁽¹⁾		160	15	Stainless steel 18/8		060L326966 ⁽²⁾
RT 271		182	11	Brass		017-436766
RT 108		465	11	Brass		017-421666

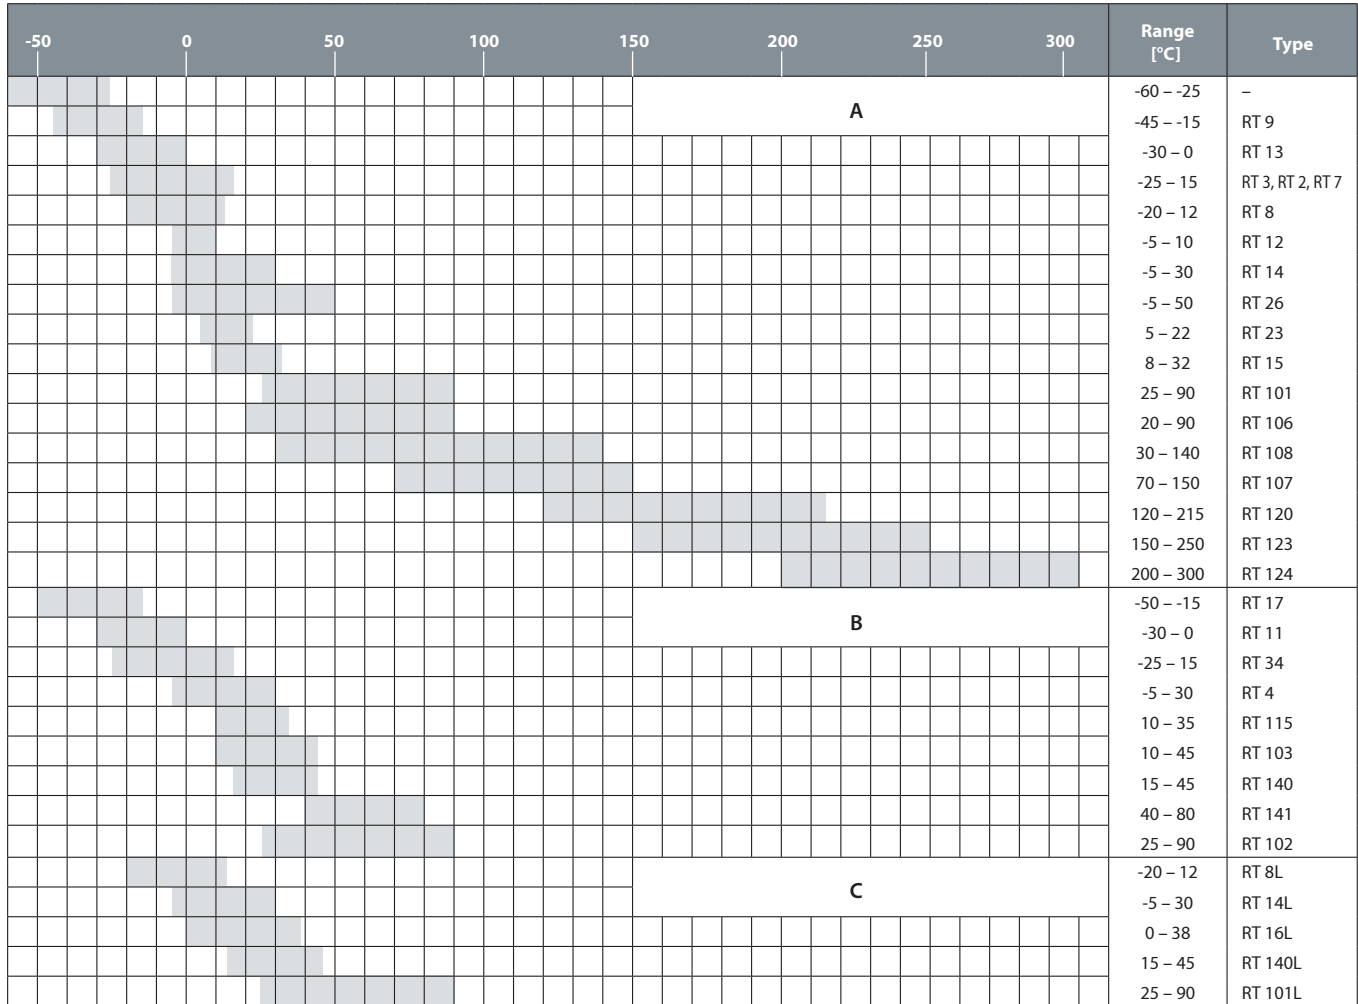
⁽¹⁾ Unit supplied with washer set.

⁽²⁾ Supplied without washer set.

Overview






Product portfolio

Figure: Overview



A	Thermostats with cylindrical remote sensor
B	Thermostats with room sensors, duct sensor and capillary tube sensor
C	Thermostats with adjustable neutral zone

Table: Examples of RT types

RT 107	RT 106	RT 115	RT 140	RT 16L
With cylindrical remote sensor, cover with windows and hand setting knob	With cylindrical remote sensor, cover with windows and hand setting knob	With room sensor	With duct sensor	With room sensor (Neutral zone thermostat)
				

Functions

RT thermostats with automatic reset


The RT thermostats are set according to the function required on falling temperature.

Contacts 1 – 4 break while contacts 1 – 2 make when the temperature falls to the scale setting. The contacts changeover to their initial position when the temperature again rises to the scale setting plus the differential (see Figure: RT thermostats with automatic reset).

Contact function:

1. Contact changeover for rising temperature occurs at scale setting plus differential.
2. Contact changeover for falling temperature occurs at scale setting.

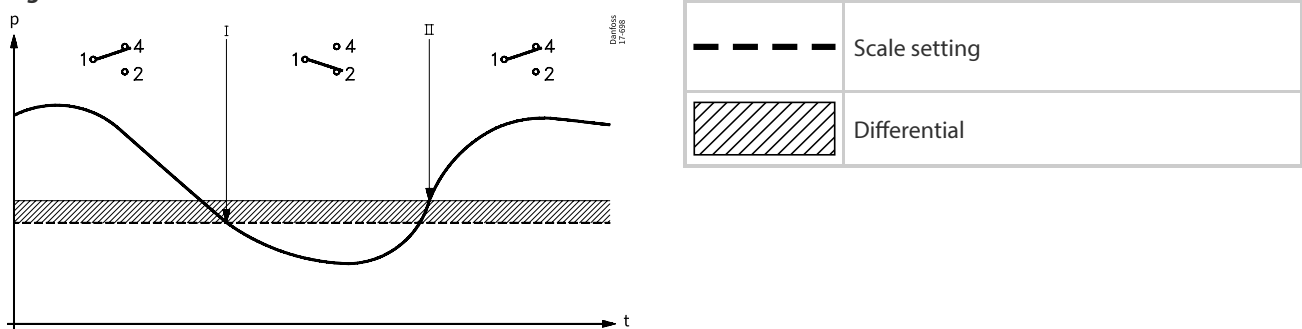Figure: RT thermostats with automatic reset



RT thermostats with max. reset


Contacts 1 – 4 make while contacts 1 – 2 break when the temperature exceeds the set range value. The contacts changeover to their initial position when the temperature falls to the scale value minus the differential (see Figure: RT thermostats with max. reset).

Alarm function:

1. Alarm for rising temperature given at the set value.
2. Alarm for falling temperature given at the set value minus the differential.

Manual reset possible only when the temperature has fallen to the range setting minus differential.

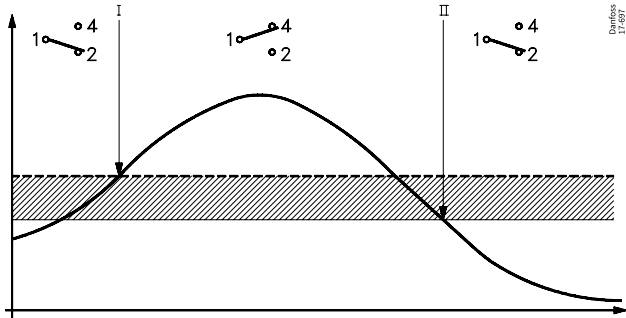Figure: RT thermostats with max. reset



	Scale setting
	Differential


Types of charge

RT units with vapour charge

The method of operation of these units is based on the connection between the pressure and temperature of saturated vapour. The sensor system contains just a small amount of liquid and this is brought completely to vapour form.

If the sensor in this type of unit is located coldest in relation to the capillary tube and bellows housing, the ambient temperature has no influence on regulation accuracy.

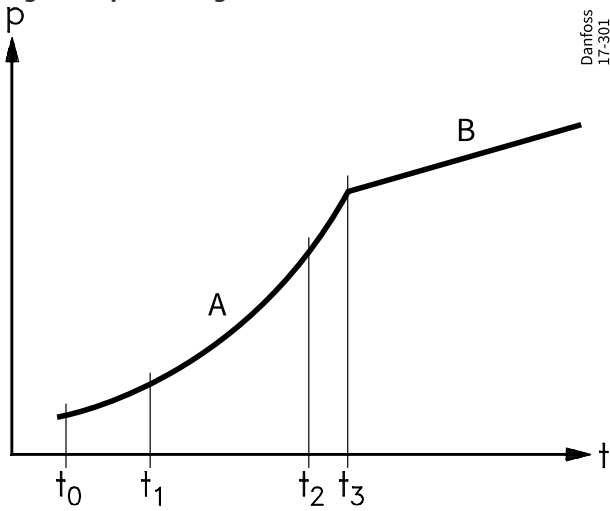Figure: Vapour charge




p	Pressure
t	Temperature
A	Saturated vapour
B	Gas

RT units with adsorption charge

The thermostatic element contains a superheated gas together with a solid substance (always in the sensor) having a large adsorption surface. This gives an advantage in that the sensor can be installed either colder or warmer than the remaining part of the thermostatic element. However, the charge is to some extent sensitive to changes in the temperature of the bellows and capillary tube.

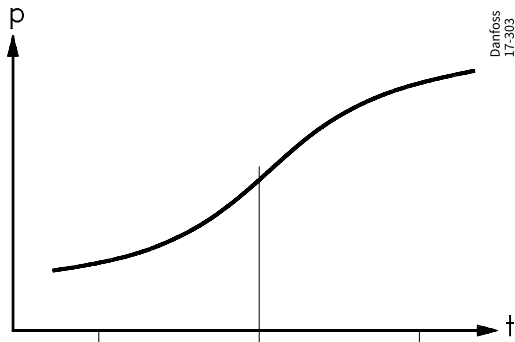Figure: Adsorption charge




Scale correction

If the thermostat is to be used in ambient temperatures that differ significantly from the factory setting (20 °C), compensation can be made for the scale deviation:

Scale correction = Z x a

Z can be found while a is the correction factor from the table

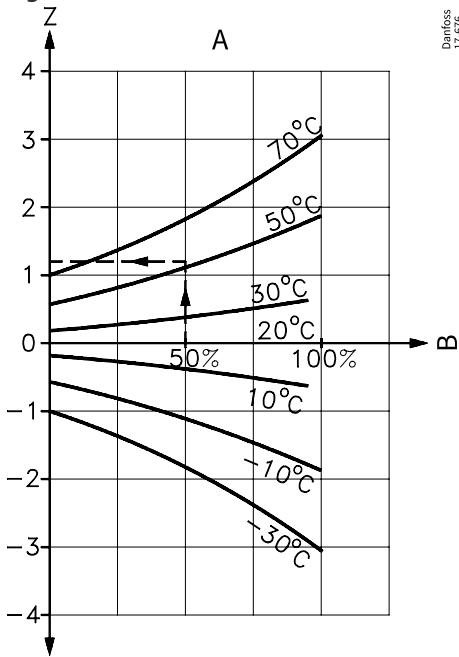Figure: Factor for scale deviation



Z	Factor for scale deviation
A	Relative scale setting %

Example:

Find the necessary scale correction for a RT 108 with a regulation range 30 – 140 °C.

Setting: 85 °C

Ambient temperature: 50 °

Correction:

$$\frac{\text{Set value} - \text{min. scale value}}{\text{Max. scale value} - \text{min. scale value}} \times 100 = \%$$

$$\frac{85 - 30}{140 - 30} \times 100 = 50\%$$

Correction factor (a) 2.0 from Table: Correction factor

Factor for scale deviation Z (see Figure: Factor for scale deviation): + 1.2

Scale correction: $Z \times a = 1.2 \times 2.0 = 2.4 \text{ } ^\circ\text{C}$

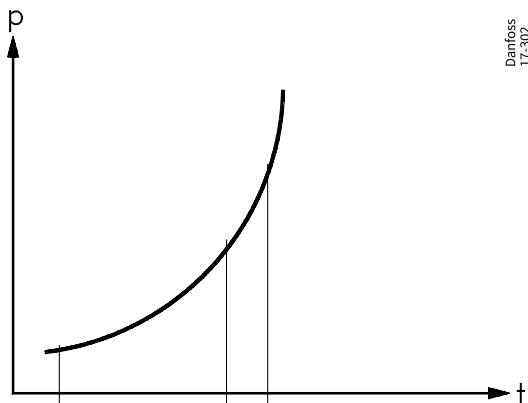
Corrected setting: $85 + 2.4 = 87.4$

Table: Correction factor

Type	Range [°C]	Correction factor [a]
RT 2	-25 – 15	2.3
RT 7	-25 – 15	2.9
RT 8 / RT 8L	-20 – 12	1.7
RT 12	-5 – 10	1.2
RT 14 / RT 14L	-5 – 20	2.4
RT 15	8 – 32	1.2
RT 23	5 – 22	0.6
RT 101 / RT 101L	25 – 90	5
RT 102	25 – 90	5
RT 108	30 – 140	2
RT 140 / RT 140L	15 – 45	3.1

RT units with solid charge

The method of operation of these units is based on the connection between the pressure and temperature of saturated vapour.

Figure: Saturated vapour with solid charge

The sensor system contains a fairly large amount of liquid, of which only a small part is brought to vapour form. If the sensor in this type of unit is located warmest in relation to the capillary tube and bellows housing, the ambient temperature has no influence on regulation accuracy.

Product details

General data

Table: Technical data

Designation	RT thermostats
Ambient temperature	-50 – 70 °C. See remarks on Figure: Factor for scale deviation.
Contact system	Single-pole changeover switch (SPDT)
Contact load	Alternating current: AC-1: 10 A, 400 V AC-3: 4 A, 400 V AC-15: 3 A, 400 V
Contact material: AgCdO	Direct current: DC-13: 12 W, 220 V (see Figure: Direct current)
Special contact system	See Table: Contact system
Cable entry	2 PG 13.5 for 6 – 14 mm diameter cables.
Enclosure	IP66 acc. to IEC 529 and EN 60529. Units supplied with external reset. IP54. The thermostat housing is made of bakelite acc. to DIN 53470. Cover is made of polyamide.

Figure: Contact system

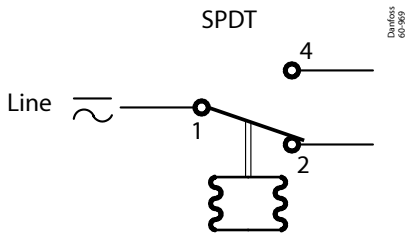


Figure: Direct current


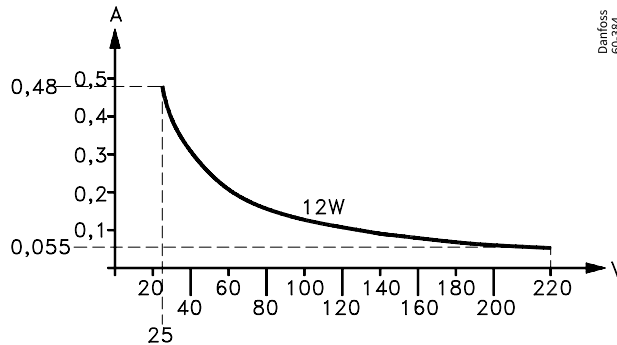


Figure: Identification

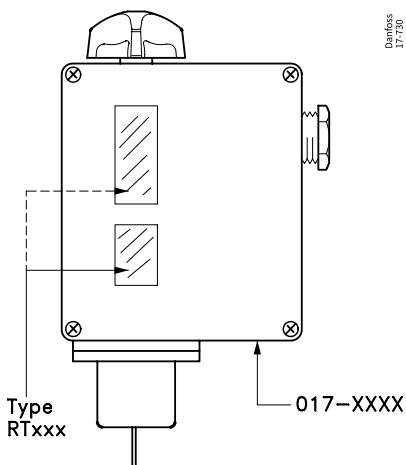

The type designation of the units is given on the setting scale. The code no. is stamped on the bottom of the thermostat housing.

Setting

The range is set by using the setting knob (5) while at the same time reading the main scale (9).

Tools must be used to set thermostats fitted with a seal cap. The differential is set by the differential disc (19).

The size of the obtained differential can be established by comparing the set main scale value and the scale value on the differential disc, with the help of the nomogram for the thermostat concerned (see Temperature data).

Example

- Unit: RT 120
- Range setting: 160 °C
- Differential setting: 2

It will be seen on the nomogram, see Temperature data, that by drawing a line from 160 °C on scale A, through 2 on scale C, the value for the differential can be read from scale B: 6 °C.

Selection of differential (mechanical differential)

To ensure that the plant functions properly, a suitable differential is necessary. Too small a differential will give rise to short running periods with a risk of hunting. Too high a differential will result in large temperature variations.

Differentials

The mechanical differential is the differential that is set on the differential disc in the thermostat. The thermal differential (operating differential) is the differential the system operates on.

The thermal differential is always greater than the mechanical differential and depends on three factors:

1. Flow velocity of the medium
2. Temperature charge rate of the medium
3. Heat transmission

The medium


The fastest reaction is obtained from a medium having high specific heat and high thermal conductivity. It is therefore advantageous to choose a medium that fulfills these conditions (provided there is a choice). The flow velocity of the medium is also of significance (optimum flow velocity for liquids is approx. 0.3 m/s).

Example

Regulation of a central heating boiler. The temperature in an oil-fired central heating boiler must be regulated by an RT 101. Max. temperature 76 °C. Min. temperature 70 °C. Differential $76 - 70 = 6$ °C.

1. Connect the oil burner via thermostat terminals 1-2.
2. Set the thermostat on 70 °C using the hand knob (5), see Figure: Setting.
3. Set the differential disc (19) on 3. This figure is obtained from the RT 101 nomogram, see Temperature data.

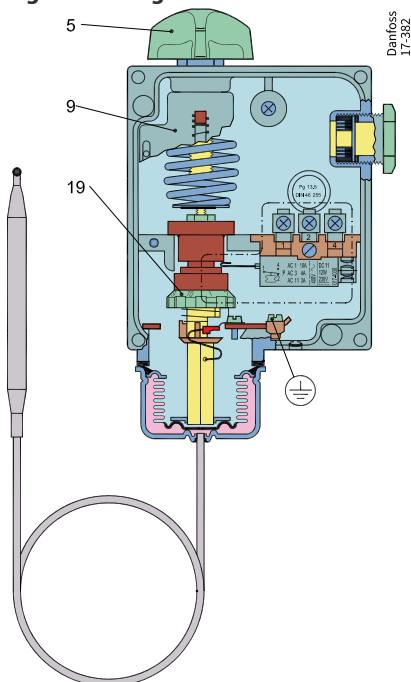
Figure: Setting



5	Setting knob
9	Main scale
19	Differential setting disc

When the plant has been operating for some time, an assessment can be made of whether the thermal differential is satisfactory. If it is too large, reduce the mechanical differential of the thermostat.

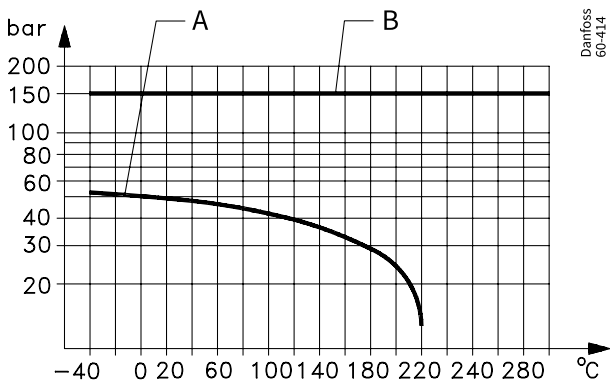Figure: Permissible media pressure on the sensor pocket as a function of temperature




A	Brass
B	Stainless steel 18/8

Neutral zone setting


The range is set using the setting knob (5), see Figure: Thermostat, type RT-L, while reading the main scale (9). The set value is the break temperature for contacts 1-4, see Figure: Adjustment. The required neutral zone can be found in the diagram for the unit concerned, see Figure: Neutral zone setting. The position at which the neutral zone disc (40) must be set can be read from the low scale in the diagram.

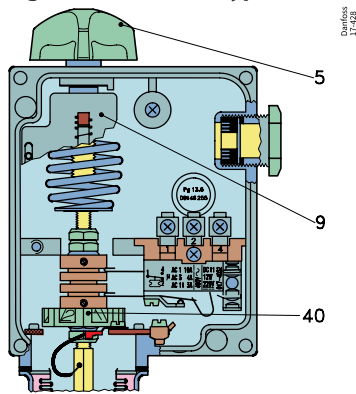Figure: Thermostat, type RT-L



5	Setting knob
9	Main scale
40	Neutral zone disc with scale

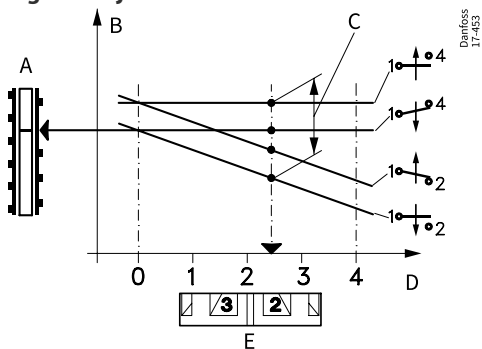Figure: Adjustment



A	Scale setting
B	Temperature
C	Dead zone
D	No. setting
E	No. position

Example: RT 16L

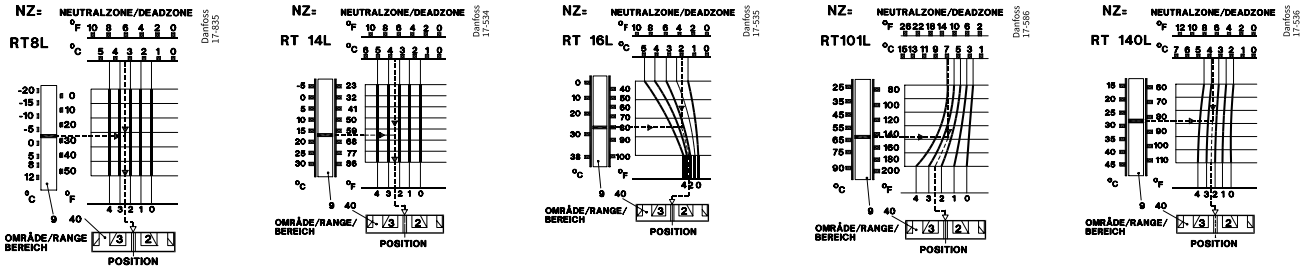
Setting temperature: 24 °C

Required neutral zone: 1.9 °C

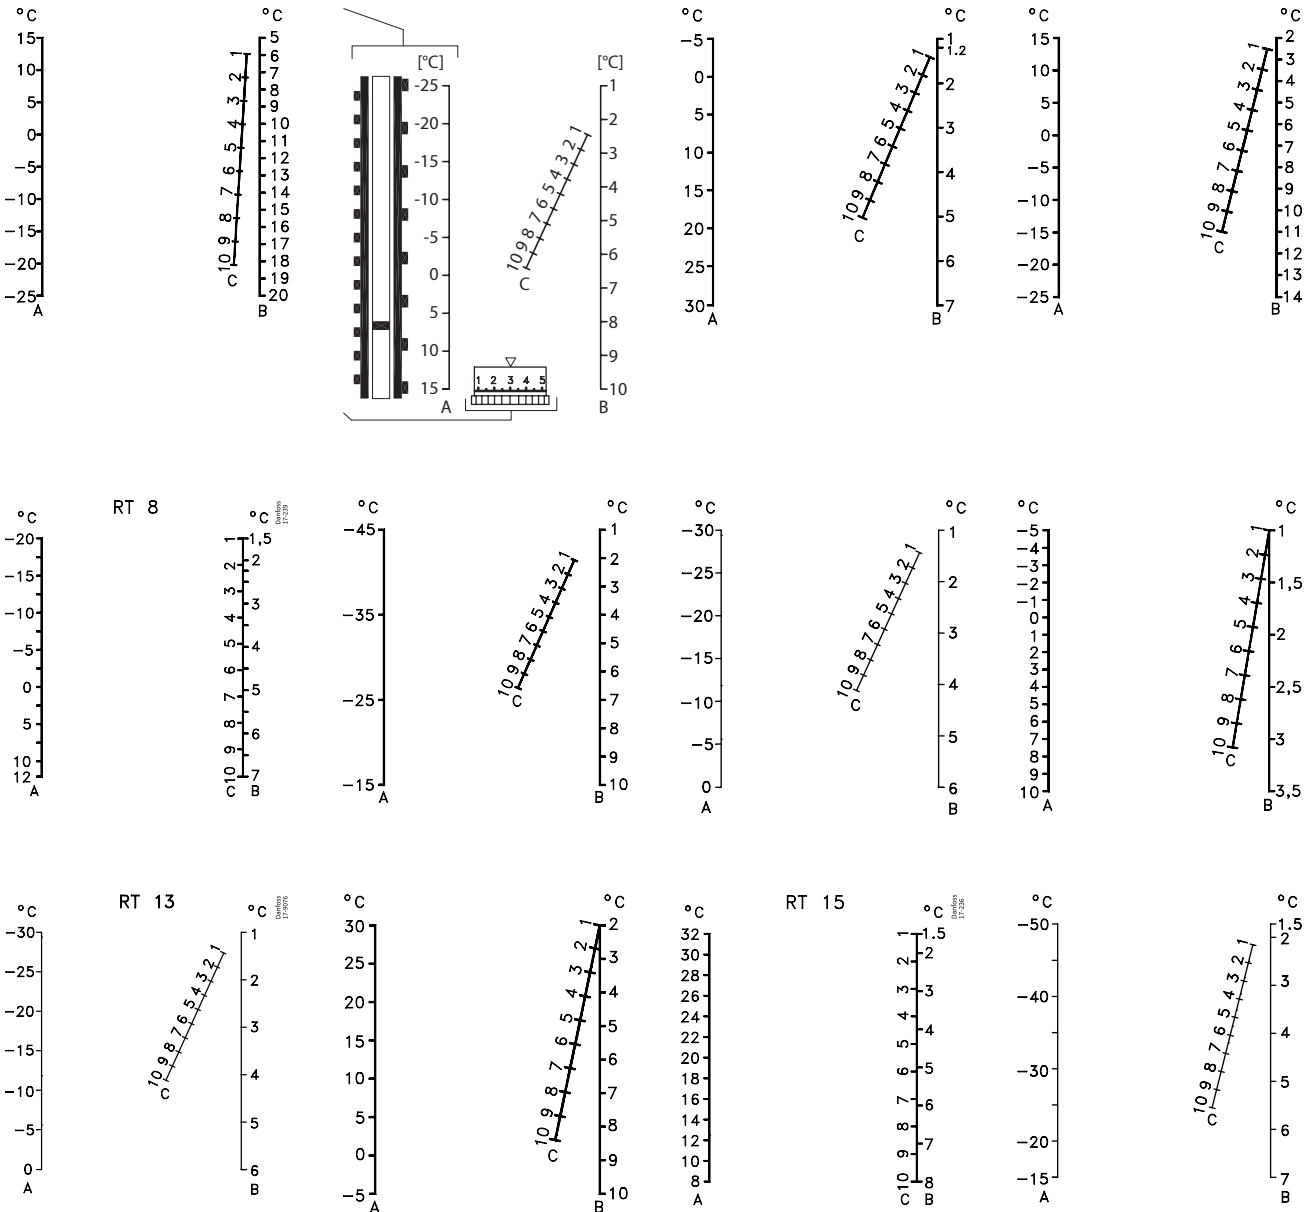
Using the setting knob, set the thermostat on 24 °C.




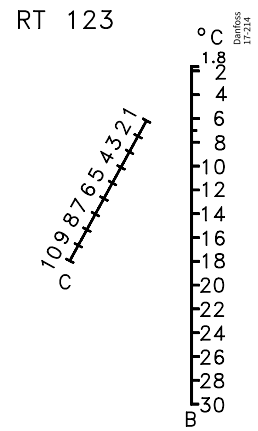
 
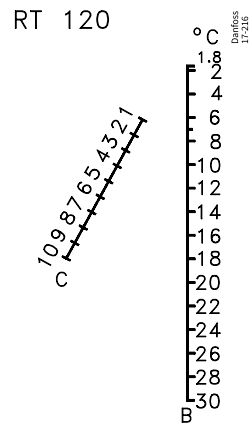
 
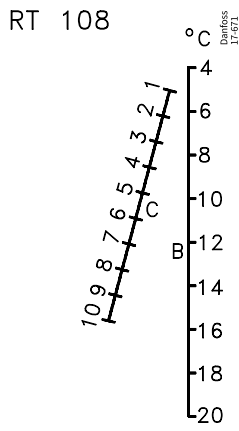
 
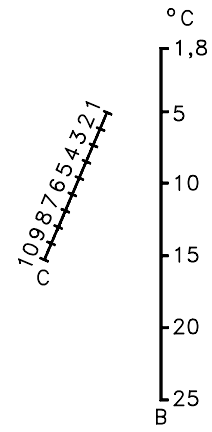
 
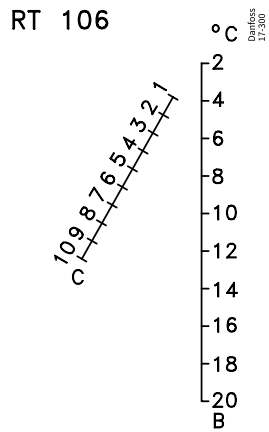
 
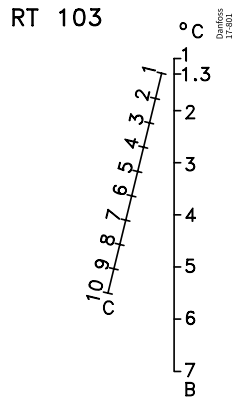
 
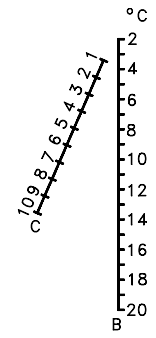
The dotted lines in the diagram for the RT 16L in the **Figure: Neutral zone setting** intersect each other on the curve for position 2.8 and the neutral zone setting disc (40) must be set to that position.

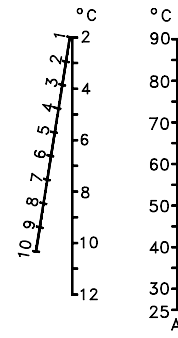
Figure: Neutral zone setting



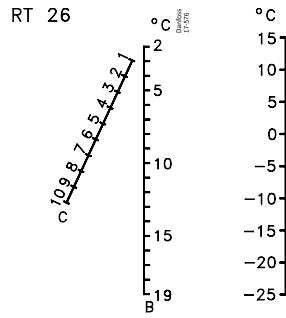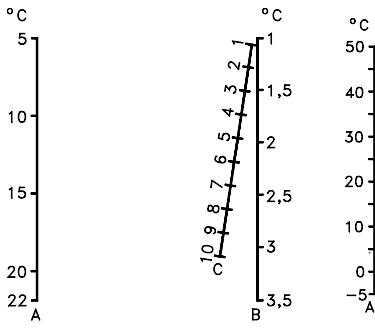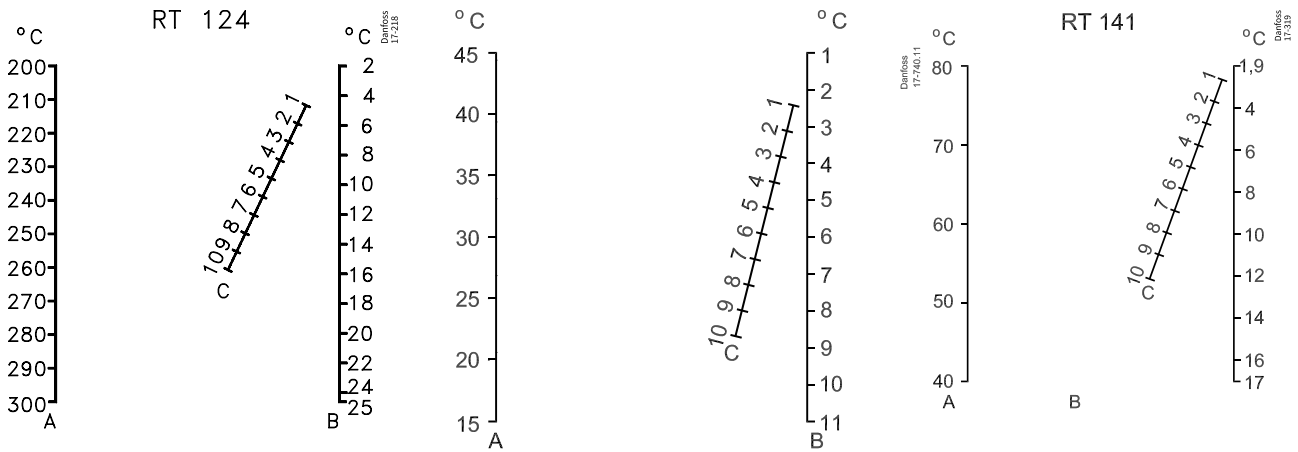Pressure and temperature data
Nomograms for obtained differentials








A	Range setting
B	Obtained differential
C	Differential setting

Dimensions

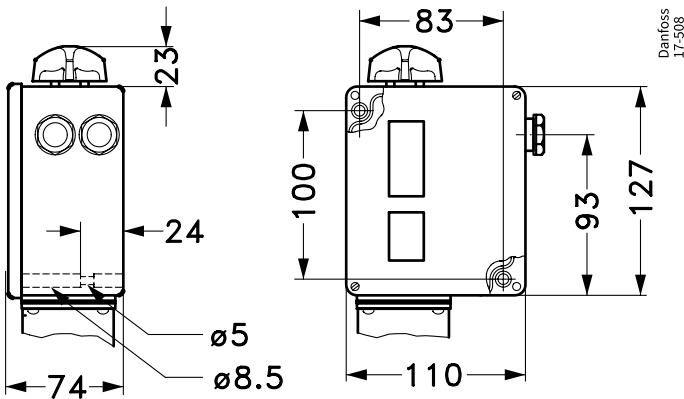Figure: Dimensions [mm]



RT 101, RT 107, RT 120, RT 123 special versions with seal cap and blank cover.

Figure: RT series with seal cap

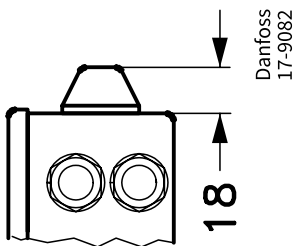


Table: Dimensions [mm] of RT series

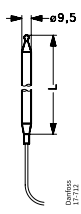
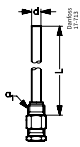
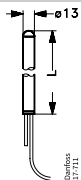
<p>Danfoss 17-907</p> <p>91</p>	<p>Danfoss 17-9078</p> <p>50</p> <p>Min.50</p>	<p>Danfoss 17-9079</p> <p>47</p> <p>Min.50</p>	<p>Danfoss 17-9080</p> <p>40</p> <p>Min.50</p>	<p>Danfoss 17-9081</p> <p>202</p> <p>Min.50</p>
<p>RT 4 RT 11 RT 16, RT 16L RT 17 RT 34 RT 103 RT 115</p>	<p>RT 106 RT 107 RT 120 RT 123</p>	<p>RT 2 RT 3 RT 9</p>	<p>RT 7 RT 8, RT 8L RT 10 RT 12 RT 13 RT 14, RT 14L RT 15 RT 21 RT 23 RT 24 RT 26 RT 101, RT 101L RT 108 RT 124 RT 140, RT 140L</p>	<p>RT 270 RT 271</p>

Table: Special sensor

RT 140 / RT 140 L	RT 102	RT 124
<p>Danfoss 17-9083</p> <p>∅5</p> <p>40</p> <p>50</p> <p>∅25</p> <p>100</p>	<p>Danfoss 17-9084</p> <p>110</p> <p>4</p>	<p>Danfoss 17-9085</p> <p>∅11</p> <p>110</p>
<p>W. no: 2.0090 copper</p>		<p>W. no: 1.4301</p>

Weight approx. 1 kg
Choice of suitable sensor pocket

Table: Dimensions of RT series

	W. no.	Type	Capillary tube length [m]	L [mm]	Suitable sensor pocket Code no.	Material	W.no		L [mm]	a1 [mm]	d [mm]
	2.0090 (copper)	RT 2, RT 3, RT 7, RT 9, RT 10, RT 13, RT 26, RT 120	2, 3, 5, 8, 10	80	017-437066 017-436966	Brass 18/8 steel	2.0321 1.4301		112	G ½	11
		RT 101, RT 101L	2, 3		017-437066 017-436966		2.0321 1.4301		112	G ½	11
		RT 8, RT 8L, RT 14, RT 14L, RT 15, RT 107, RT 123, RT 270	2, 3, 5, 8, 10	110	017-437066 017-436966	Brass 18/8 steel	2.0321 1.4301		112	G ½	11
		RT 101	5, 8, 10		017-437066 017-436966		2.0321 1.4301		112	G ½	11
		RT 14	10	150	017-436766	Brass	2.0321		182	G ½	11
		RT 271	10	180	017-421666				465	G ½	11
		RT 12, RT 13	2	210	017-421666				110 160	G ½	15
RT 108	2	410	017-421666								
	2.0240 (brass)	RT 106	2.3	76	060L333066 060L332766	Brass	2.0235	110 160	G ½	15	
			5	86	060L333066 060L332766			Brass	2.0235	110 160	G ½


Installation

RT units have two fixing holes which become accessible when the front cover is removed. Units fitted with switch 017-018166⁽¹⁾ must be installed with the setting knob upwards.

The other thermostats in the RT series can be installed in any position, except that on plant subjected to severe vibrations it is advantageous to have the screwed cable entry downwards.

¹ Contact system with non snap-action function. See [Spare parts and accessories](#).

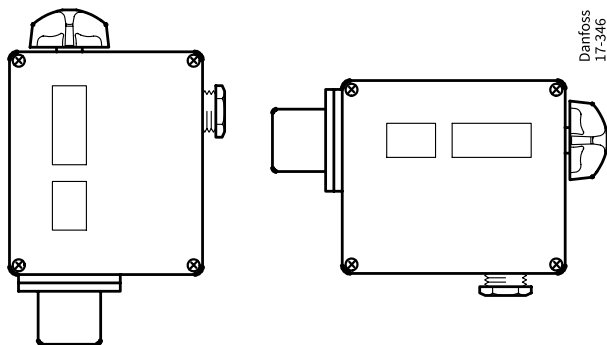Figure: Position of unit



Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

Approval type	Title	Certification body	Approval topic
Marine Certificate	NKK TA24041M	ClassNK - The Japanese Marine Association	Marine
CCC Declaration	Danfoss CCC 2024010305641306	CCC - China Compulsory Certification	CCC
Marine Certificate	DNV TAA00000Y8 Rev. 1	DNV GL	
Manufacturer's Declaration	Danfoss MD 060-9639.AB	Danfoss	China RoHS
EU Declaration	Danfoss EU 060-9650AF	Danfoss	LVD, EU RoHS
Electrical Safety Certificate	EAC KZ 7100841.01.01.01391	EAC - Eurasian Customs Union	EMC
Export Control Declaration	Pressure switches & Thermostats	Danfoss	
Marine Certificate	LR21366305TA	LR - Lloyd's Register	
Marine Certificate	DNV TAA000015E Rev. 1	DNV GL	Marine
Marine Certificate	RINA ELE290325XG	RINA - Registro Italiano Navale	
UA Declaration	Danfoss UA 2024-07-25 cooling sensors	Danfoss	EMC, LVD
UA Declaration	Danfoss UA 2023-01-10 Regulators PL01 PL04	Danfoss	PED, Pressure
Pressure Safety Certificate	LLC CDC EURO-TYSK UA.TR.089.1015.05-22	LLC CDC EURO TYSK - Ukraine	Pressure
Marine Certificate	BV 07682-F0 BV	BV - Bureau Veritas	
Explosive Safety Certificate	IECEX ULD 14.0013X 04	UL Demko - UL International DEMKO A - S	Explosive
Explosive Safety Certificate	CCC 2020312304000764	CCC - China Compulsory Certification	Explosive
Explosive Safety Certificate	UL21UKEX2021X	UL - Underwriters Laboratories inc.	Explosive
Explosive Safety Certificate	DEMKO 14 ATEX 1406X Rev. 4	UL Demko - UL International DEMKO A - S	ATEX, Explosive
UK Declaration	Danfoss UK 060-9684.AA	Danfoss	ATEX, UK RoHS, Explosive
Quality Assurance Certificate	DEMKO 12 ATEX Q1209493 Rev. 13	UL Demko - UL International DEMKO A - S	ATEX, Explosive
Explosive Safety Certificate	IECEX DK/ULD/QAR12.0002/11	UL Demko - UL International DEMKO A - S	Explosive



Quality Assurance Certificate	UL21UKQAN2258 Rev. 5	UL - Underwriters Laboratories inc.	Explosive
Marine Certificate	RINA ELE305425XG	RINA - Registro Italiano Navale	
EU Declaration	Danfoss EU 060-9657.AG	Danfoss	EU RoHS, ATEX
Marine Certificate	KR HMB 17529-AE004	KR - Korean Register of Shipping	Marine

Contact details

Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: designcenter.danfoss.com.



The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: store.danfoss.com.



Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: partner.danfoss.com and is ready to support your business.



Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: documentation.danfoss.com.



Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: learning.danfoss.com.



Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: danfoss.com.

Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.
