

# SF00, SF10, SF20

## STRAP-ON TEMPERATURE SENSORS

**PRODUCT DATA**



### FEATURES

- Pt 1000, NTC 10k, or NTC 20k temperature sensing element
- Wide sensing range
- High accuracy

### SPECIFICATION

**Nominal value**

Pt 1000	1000 Ω at 0 °C (32 °F)
NTC 10k	10 kΩ at 25 °C (77 °F)
NTC 20k	20 kΩ at 25 °C (77 °F)

**Accuracy**

Pt 1000 (IEC751 Class B)	±0.3 K at 0 °C (32 °F)
NTC 10k, NTC 20k	±0.2 K at 25 °C (77 °F)

**Sensitivity**

Pt 1000	≈ 3.85 Ω / K
NTC 10k	-440 Ω / K at 25 °C (non-linear)
NTC 20k	≈ -934.5 Ω / K at 25 °C (non-linear)

**Time constant**

< 30 s

**Electrical connection**

SF00/SF10/SF20 terminals for 2 x 1.5 mm<sup>2</sup> cable

**Ambient limits (housing)**

Storage temperature	-30...+70 °C (-22...+158 °F)
Humidity	5...95% rh, non-condensing

**Safety (terminal box)**

Protection class IP54 / IP65 as per EN 60529

**Flame retardant**

UL94-V0 rated plastic enclosure  
 T<sub>max</sub> = 120 °C (enclosure)

**Dimensions**

See Fig. 1 on pg. 2

### GENERAL

The SF00, SF10, and SF20 Strap-On Temperature Sensors are used for temperature measurement on warm/hot water pipes or solar collectors.

The sensors are suitable for use in systems using Pt 1000, NTC 10k, or NTC 20k temperature sensing elements.

## DIMENSIONS

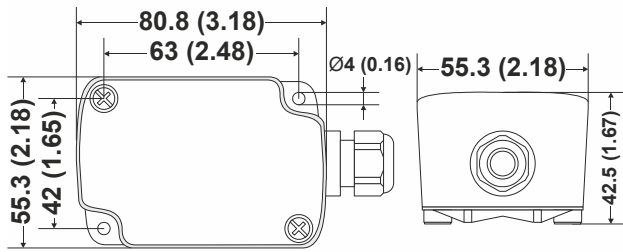


Fig. 1. Housing, dimensions in mm (inches)

## MODELS

part	sensor type	operating temp.	IP rating
SF00-B54	Pt 1000	-30 ... +110 °C (-22 ... +230 °F)	IP54
SF00-B65	Pt 1000		IP65
SF10-B54	NTC 10kΩ		IP54
SF10-B65	NTC 10kΩ		IP65
SF20-B54	NTC 20kΩ		IP54
SF20-B65	NTC 20kΩ		IP65

## INSTALLATION

wiring run	max. length
sensor to controller	200 m (660 ft)

Offset due to wire resistance per 10 m of distance from sensor to controller, when using the SF00-Bxx (Pt 1000):

type of wire	temperature offset Pt 1000
0.5 mm <sup>2</sup> (AWG20)	0.18 °C (0.324 °F)
1.0 mm <sup>2</sup> (AWG17)	0.09 °C (0.162 °F)
1.5 mm <sup>2</sup> (AWG15)	0.06 °C (0.108 °F)

**NOTE:** Use shielded wiring in areas with high EMI. Keep 15 cm (5.9") minimum distance between sensor lines and 230 Vac power lines.

## ELECTRICAL CONNECTION

The wiring of the temperature sensor must be in accordance with the overall wiring circuit diagram.

The terminals are not polarized. Thus, connecting the wires in reverse will not result in any malfunction.

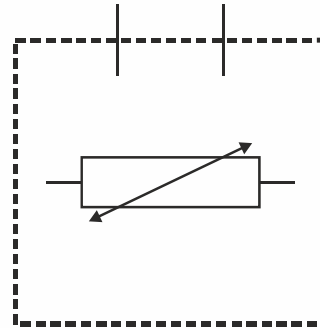


Fig. 2. SF00, SF10, SF20 wiring

**Honeywell**

Manufactured for and on behalf of the Connected Building Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

### Home and Building Technologies

Honeywell GmbH  
 Böblinger Strasse 17  
 71101 Schönaich, Germany  
 Phone +49 (0) 7031 637 01  
 Fax +49 (0) 7031 637 740  
<http://ecc.emea.honeywell.com>

EN0B-0725GE51 R1219

Subject to change without notice

 **AutomatikCentret**

Strandvejen 42 • Saksild • 8300 Odder  
 86 62 63 64 • [www.automatikcentret.dk](http://www.automatikcentret.dk)  
[info@automatikcentret.dk](mailto:info@automatikcentret.dk)