

# Speedy

# M5410 C1001/L1001

## SMALL ON/OFF LINEAR VALVE ACTUATORS

### PRODUCT DATA



### FEATURES

- Suitable for ON/OFF control without feedback
- Short runtime
- Electronic switch-off in the end position ensures long-term reliability and saves energy
- Furnished with prewired connection cable
- Simple, standardized valve/actuator coupling – thus, no tools required for mounting
- Small size allows installation where space is limited
- High resistance to glycol and other chemicals

### SPECIFICATIONS

#### Input voltage

M5410C1001	24 Vac ±20%, 50 Hz; 24 Vdc +20%...-10%
M5410L1001	230 Vac +10%...-15%, 50 Hz

#### Power consumption

M5410C1001	<8 W during operation <0.5 W in end position
M5410L1001	<1.8 W during operation <1.8 W in end position

#### Input signal

M5410C1001	<10 mA
M5410L1001	1 mA

#### Control mode

ON/OFF

#### Stroke

6.5 mm

#### Runtime (push/pull)

approx. 1.8 mm/s and 0.4 mm/s

#### Stem force

90 N (minimum)

#### Protection standard

IP 54

#### Insulation class

II

#### Connection cable

1.5 m

#### Max. cable length

See section "Wiring" on pg. 2

#### Ambient operating limits

0...60 °C

#### Weight

0.2 kg

#### Suitable valves

V5822/23, V5832/33 (DN15/20)  
 VSxF/VSxC (DN15/20/25), and  
 V100/V2000 TRV

### APPLICATION

The Honeywell M5410C1001 and M5410L1001 actuators are designed specifically to provide ON/OFF control in conjunction with the V5822/23 and V5832/33 series of small linear valves (DN15/20), the VSxF/VSxC series (DN15/20/25), as well as with the V100/V2000 TRV series.

The M5410C1001 and M5410L1001 actuators are suitable for use in all kinds of fast-acting ON/OFF control systems, including boiler and solar systems, fan coil units, induction units, small reheaters, and recoolers as well as for zone control applications. They are employed in electronic temperature control systems using hot and/or cold water as the controlled medium. They are operated by an SPST signal.

## VERSIONS

OS number	power supply	stroke	action at open contact	manual operation	stem force (min.)
M5410C1001	24 Vac	6.5 mm	stem retracts	via valve adjustment cap	90 N
M5410L1001	230 Vac	6.5 mm	stem retracts	via valve adjustment cap	90 N

## OPERATION

The actuator movement is produced by a screw spindle driven in both directions through a set of gears by a d.c. motor. The motor is switched OFF electronically when the actuator has built up the closing force. The actuator is fixed to the valve body by means of a coupling ring requiring no tools for mounting. The actuator is maintenance-free and furnished complete with a ready-to-wire connecting cable.

## MOUNTING

**NOTE:** The actuator may be mounted only either beside or above the valve. Adjust the valve in the proper position before mounting the actuator.

Remove the adjustment cap before fixing the actuator to the valve. For easy mounting, ensure that the actuator is in the "retracted" (factory-supplied) position before fixing the actuator to the valve body.

The actuator must be mounted by hand. Do not use tools or additional force, as that could damage the actuator and valve.

## DIMENSIONS

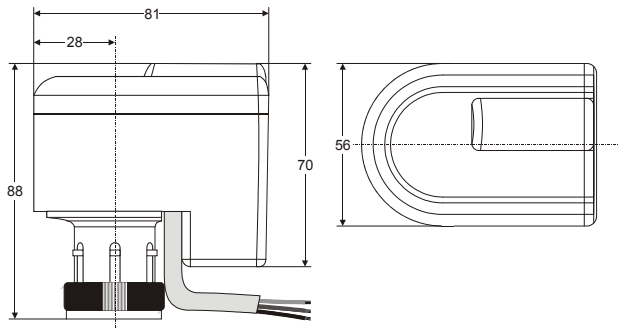


Fig. 1. Dimensions (in mm)

## WIRING M5410L1001

### CAUTION

- Newer models (identified by the subscript "2" at the end of the model number appearing on the manufacturer's plate, e.g., "M5410L1001<sub>2</sub>") are protected against miswiring. Incorrect wiring will damage older models (lacking the subscript "2").

The electrical installation must comply with Fig. 2.

**NOTE:** The maximum permissible cable length (use  $3 \times 1.5 \text{ mm}^2$ ) between the actuator and the controller is 40 m. If a suppression capacitor (max. 1.5 nF) has been installed in the line, the max. permissible cable length is 15 m. Exceeding this limit will result in actuator malfunction.

**NOTE:** Older models (lacking the subscript "2") should not be wired in parallel with newer models (e.g., "M5410L1001<sub>2</sub>"), as the older models will then not function properly.

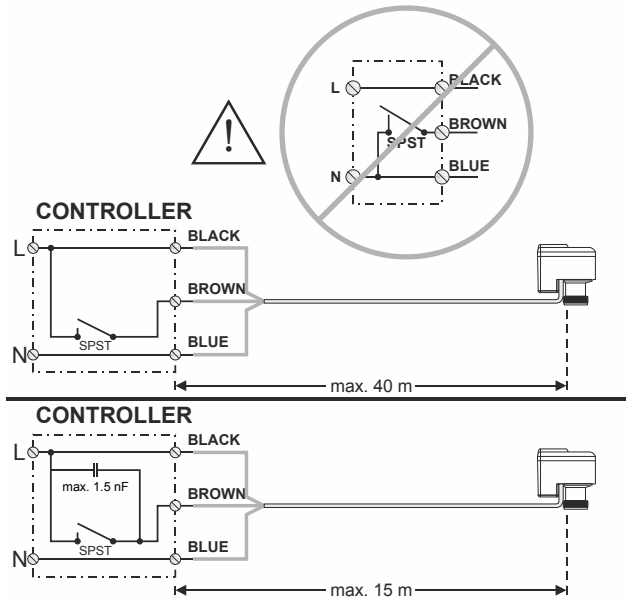


Fig. 2. Electrical wiring M5410L1001

## M5410C1001

The electrical installation must comply with Fig. 3.

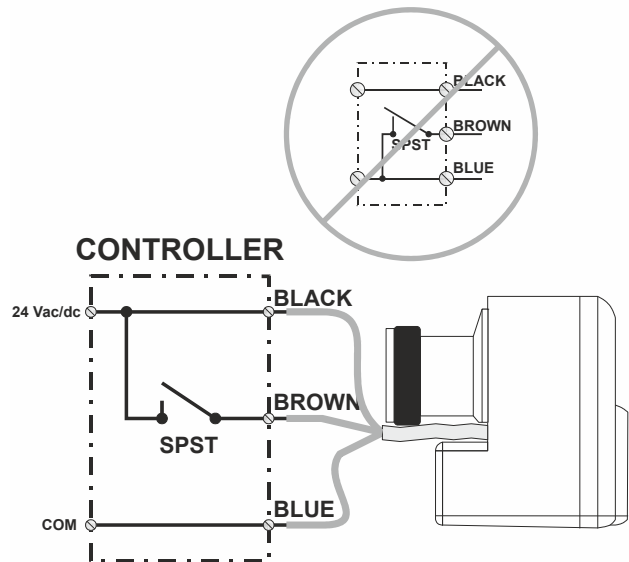


Fig. 3. Electrical wiring M5410C1001

## ACTION

Closing the contact at the brown cable will drive the actuator to the "extended" position. Upon opening the contact, the actuator will drive back to the "retracted" position.

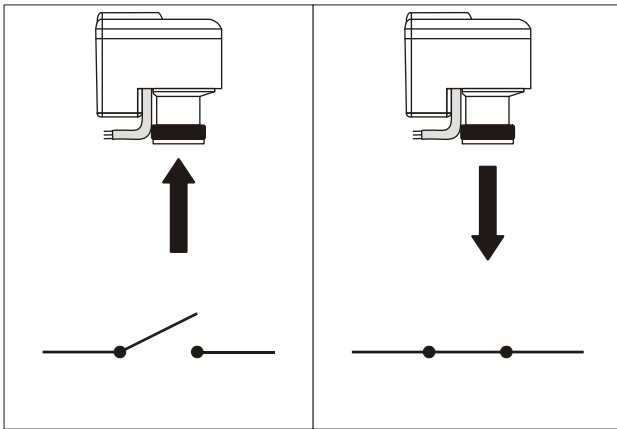


Fig. 4. Action



## CAUTION

In case of power failure, the actuator will not necessarily stay at its current position. Rather, the actuator stem will retract to an extent depending upon the remaining charge in the actuator's capacitor. Thus, in the case of a "stem-up-to-open" valve, the valve may open slightly, allowing a minimum circulation of fluid in the system. Please NOTE that this is not a guaranteed safety function like that offered by a spring-return actuator!

**Honeywell**

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

### Automation and Control Solutions

Honeywell GmbH  
 Böblinger Strasse 17  
 71101 Schönaich, Germany  
 Phone +49 (0) 7031 637 01  
 Fax +49 (0) 7031 637 740  
<http://ecc.emea.honeywell.com>

 **AutomatikCentret**

Strandvejen 42 ♦ Saksild ♦ 8300 Odder  
 86 62 63 64 ♦ [www.automatikcentret.dk](http://www.automatikcentret.dk)  
[info@automatikcentret.dk](mailto:info@automatikcentret.dk)